



# **C520**

## **User's Manual**



R00 (USA)

### **Trademarks**

The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. All other brand and product names are trademarks or registered trademarks of their respective companies.

### **Disclaimer**

Specifications and manuals are subject to change without notice. Mio Technology assumes no liability for damage incurred directly or indirectly from errors, omissions, or discrepancies between the device and the manuals.



# Table of Contents

<b>Precautions and Notices .....</b>	<b>vii</b>
<b>1 Getting Started.....</b>	<b>1</b>
1.1 Understanding Hardware Components.....	1
Front Components .....	1
Back Components.....	2
Left-Side Components .....	2
Top Components.....	3
Bottom Components .....	3
1.2 Performing the Initial Start Up.....	4
1.3 Connecting to AC Power and Charging the Battery.....	6
1.4 Charging the Battery via the USB Cable.....	7
1.5 Using Your Device in a Vehicle.....	8
Using the Device Holder .....	8
Connecting the Car Charger .....	8
1.6 Operating Basics.....	9
Turning On and Off .....	9
Navigating on the Screen.....	9
Home Screen .....	10
Using the Soft Keyboard .....	11
1.7 Inserting a SD/MMC Card .....	13
<b>2 Video.....</b>	<b>15</b>
2.1 Starting and Exiting Videos .....	15
2.2 Preparing the Video Files for Your Device.....	16
2.3 Playing Video Clips .....	17
2.4 Video Playback Controls .....	18
<b>3 Audio.....</b>	<b>21</b>
3.1 Starting and Exiting Audio.....	21
3.2 Preparing the Audio Files for Your Device.....	22
3.3 Playing Audio Files.....	22

3.4	Playback Controls .....	23
3.5	Displaying Lyrics .....	25
	Preparing the Lyrics Files for your Device .....	25
	Playing Songs with Lyrics .....	25
3.6	Using the Play Lists.....	26
	Creating a Play List .....	26
	Opening a Play List .....	27
3.7	Equalizer .....	28
3.8	Settings .....	29
<b>4</b>	<b>Pictures.....</b>	<b>31</b>
4.1	Starting and Exiting Pictures.....	31
4.2	Preparing the Pictures for Your Device.....	31
4.3	Viewing Pictures in Thumbnail View .....	32
4.4	Viewing a Picture in Full Screen .....	32
4.5	On-Screen Control Buttons .....	33
4.6	Viewing the Slideshow .....	34
<b>5</b>	<b>Bluetooth .....</b>	<b>35</b>
5.1	About Bluetooth Profiles.....	35
5.2	Connecting a Bluetooth Mobile Phone.....	36
	Connecting a Mobile Phone for the First Time.....	36
	Connecting a Different Mobile Phone .....	39
	Using the Mobile Phone Shortcut.....	39
	Disconnecting the Mobile Phone.....	40
5.3	Phone Operations .....	40
	Placing a Call .....	40
	Receiving a Call .....	43
	Operations during a Call .....	44
5.4	Connecting a Bluetooth Headset .....	45
	Connecting a Headset for the First Time .....	45
	Connecting a Different Headset.....	47
	Using the Headset Shortcut .....	47
	Disconnecting the Headset .....	47
<b>6</b>	<b>Contacts .....</b>	<b>49</b>
6.1	Starting and Exiting Contacts.....	49
6.2	Using the Contacts List .....	50
6.3	Using the Summary Screen .....	51
6.4	Navigating to a Contact's Address .....	51
6.5	Making a Phone Call to a Contact .....	52
6.6	Managing Contacts .....	53
	Adding a Contact.....	53



	Editing a Contact.....	55
	Deleting a Contact.....	55
<b>7</b>	<b>Calculator .....</b>	<b>57</b>
7.1	Starting and Exiting Calculator.....	57
7.2	Using the Calculator Mode.....	58
	Calculator Memory .....	59
7.3	Using the Currency Mode .....	59
	Editing Exchange Rate.....	61
7.4	Using the Conversion Mode.....	62
<b>8</b>	<b>File Manager.....</b>	<b>65</b>
8.1	Starting and Exiting File Manager.....	65
8.2	Transferring Files .....	66
	From the Storage Card to Your Device.....	66
	From Your Device to the Storage Card.....	68
8.3	Managing Folders and Files.....	68
<b>9</b>	<b>Settings.....</b>	<b>69</b>
9.1	Starting and Exiting Settings.....	69
9.2	Backlight.....	70
9.3	Volume .....	71
9.4	Screen .....	72
9.5	Power .....	73
9.6	Date/Time.....	74
9.7	Language .....	76
9.8	Bluetooth .....	77
	BT Preferences .....	78
	Auto-answer Preferences.....	78
	Delete Preferences .....	79
9.9	Restore.....	79
<b>10</b>	<b>MioTransfer .....</b>	<b>81</b>
10.1	Installing MioTransfer.....	81
10.2	Starting and Exiting MioTransfer.....	82
10.3	Copying Multimedia Files to Your Device .....	83
	Managing Files.....	85
10.4	Copying Contacts Information to Your Device .....	86
<b>11</b>	<b>Video ToolBox.....</b>	<b>89</b>
11.1	About Video ToolBox .....	89
11.2	Installing Video ToolBox.....	89

11.3	User Interface.....	90
11.4	Four Steps to Create a Video File.....	91
	Step 1: Determine Video Output Setting.....	91
	Step 2: Add/Edit Media Clip .....	91
	Step 3: Choose Style .....	92
	Step 4: Create Video File.....	93
11.5	Adding Media Clips .....	94
	Inserting Clips into Your Project.....	94
	Capturing Digital Video .....	94
	Capturing Analog Video .....	95
	Capturing Still Images .....	95
11.6	Editing Video Clips .....	96
	Trimming a Clip .....	97
	Trimming a Video into Multiple Clips.....	98
11.7	Creating an Image Slideshow .....	100
11.8	Choosing a Style .....	101
	Selecting a Movie Style.....	101
	Changing the Transition Effect.....	102
	Editing Text .....	102
	Change the Background Music.....	103
<b>12</b>	<b>POI Loader.....</b>	<b>105</b>
12.1	Installing POI Loader.....	105
12.2	Preparing the Source Files.....	106
	Excel File Format Example .....	106
	CSV File Format Example.....	106
12.3	Importing POIs .....	107
	Using the Imported POIs with Your Device.....	108
<b>13</b>	<b>Troubleshooting and Maintenance .....</b>	<b>109</b>
13.1	Restart and Shut Down .....	109
	Restarting Your Device .....	109
	Shutting Down Your Device .....	109
13.2	Troubleshooting .....	110
	Power Problems .....	110
	Screen Problems.....	110
	Connection Problems.....	111
	GPS Problems.....	111
13.3	Maintaining Your Device .....	112
<b>14</b>	<b>Regulatory Information .....</b>	<b>113</b>
14.1	Regulations Statements .....	113
	Class B Regulations.....	113

Bluetooth .....	115
14.2 Safety Precautions .....	115
About Charging .....	115
About the AC Adapter .....	115
About the Battery .....	116





 
# Precautions and Notices

- For your own safety, do not operate the controls of the product while driving.
- Use this product prudently. The product is intended for use solely as a navigation aid. It is not for precise measurement of direction, distance, location or topography.
- The calculated route is for reference only. It is the user's responsibility to follow the traffic signs and local regulations along the roads.
- When you get out of the car, do not leave your device on the dashboard subjected to direct sunlight. Overheating of the battery can cause malfunction and/or danger.
- GPS is operated by the United States government, which is solely responsible for the performance of GPS. Any change to the GPS system can affect the accuracy of all GPS equipments.
- GPS satellite signals cannot pass through solid materials (except glass). When you are inside a tunnel or building, GPS positioning is not available.
- A minimum of 4 GPS satellite signals is needed to determine current GPS position. Signal reception can be affected by situations such as bad weather or dense overhead obstacles (e.g. trees and tall buildings).
- Other wireless devices in the vehicle might interfere with the reception of satellite signals and cause the reception to be unstable.

- A car holder is needed when using the device in a car. Be sure that you place the device in an appropriate place, so as not to obstruct the driver's view, or deployment of airbags.

Do not mount where the driver's field of vision is blocked.

Do not place unsecured on the dashboard.

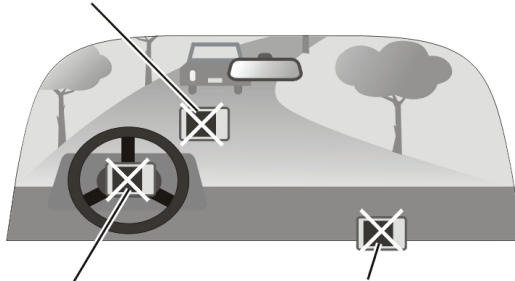

Do not mount in front of airbag panels.

Do not mount in front of an airbag field of deployment.

# 1

# Getting Started

## 1.1 Understanding Hardware Components

 
**NOTE:** Depending upon the specific model purchased, the color of your device may not exactly match the device shown in this manual.

### Front Components




Ref	Component	Description
①	Touch Screen	Displays the output of your device. Tap the screen with your fingertip to select menu commands or enter information.
②	Bluetooth Indicator	Flashes in blue to indicate that Bluetooth is on.
③	Charge Indicator	Glowes bright amber to indicate that the battery is charging, and turns green when the battery is fully charged.
④	Microphone	For Bluetooth hands-free calling.

# Back Components

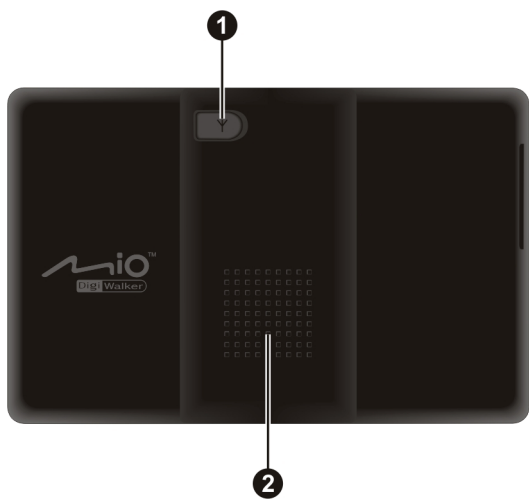

Ref	Component	Description
1	External GPS Antenna Connector	This connector (under rubber dust cover) allows use of an optional external GPS antenna with magnetic mount, which may be positioned on top of the car for better signal reception in areas with poor reception.
2	Speaker	Sends out music, sounds and voice.

# Left-Side Components

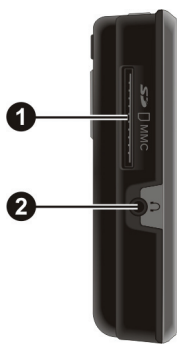 




Ref	Component	Description
①	SD/MMC Slot	Accepts a SD (Secure Digital) or MMC (MultiMediaCard) card for accessing data such as MP3 music.
②	Headphone Connector	Connects to stereo headphones.

## Top Components



 Ref	Component	Description
①	Power Button	Turns on and off the device. (Pressing briefly or for a long duration makes a difference. See Sections 1.6 and 13.1 for information.)


## Bottom Components

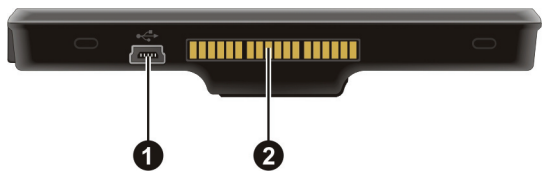


Ref	Component	Description
①	Mini-USB Connector	Connects to the charger or USB cable.
②	Cradle Connector	Connects to the cradle (purchased separately).

## 1.2 Performing the Initial Start Up

 
1. For the initial start up, press the power button for 5 seconds to turn on your device.

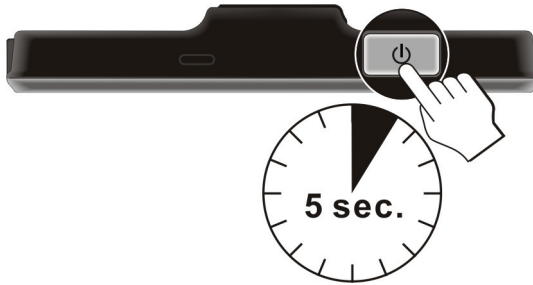

**| NOTE:** For normal operation, briefly press the power button to turn on and off your device.

2. Your device turns on. Immediately charge your device as described in the next section.
3. The “Switch Language” screen appears. Tap the arrow button to select the desired language. Then, tap the  button.



4. The “Date/Time” screen appears. Tap the appropriate arrow button to select the time zone, date, and time. Then, tap the  button.



5. The Home screen appears. You can now use your device.



## 1.3 Connecting to AC Power and Charging the Battery

When charging the battery for the very first time, you should charge it for at least 8 hours.

1. Slide and click the connector converter onto the AC adapter.
2. Connect the adapter cable to the bottom of your device.
3. Plug the AC adapter into a wall outlet.



4. The charge indicator glows amber when charging is in progress. Do not disconnect your device from AC power until the battery is fully charged, the charge indicator will turn green. This will take a couple of hours.

### NOTE:

 
- Do not immediately turn on your device after connecting the AC adapter to charge a power-depleted battery. If you need to turn on the device again, wait for at least one minute.
- Depending on your region of purchase, the connector converter may not look exactly the same as the picture shown.

### CAUTION: For optimal performance of the lithium battery:


- Do not charge the battery where the temperature is high (e.g. in direct sunlight).
- There is no need to fully discharge the battery before charging. You can charge the battery before it is discharged.
- When storing the product for a long period of time, be sure to fully charge the battery at least once every two weeks. Over discharge of the battery can affect the charging performance.

## 1.4 Charging the Battery via the USB Cable

1. Turn on the computer.
2. Connect the mini-USB end of the USB cable to the bottom of your device and the other end to a USB port on your computer.

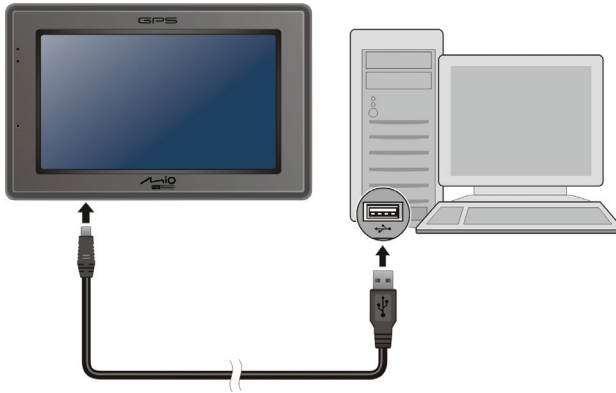

 3. If your device is on, the screen as shown below appears. Whenever your device is connected to a computer, you will not be able to use it.

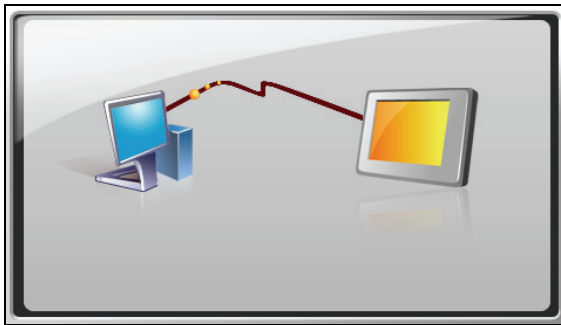

### NOTE:

- When the device is connected to a computer, it is recognized as an external mass storage device. Do not delete any files pre-installed in the device. Deleting files of which the function is unknown can cause programs or features to malfunction.
- If you intend to charge your device in this way, turn off your device so that it takes less time to charge the battery.

## 1.5 Using Your Device in a Vehicle

### CAUTION:

- Select an appropriate location for mounting the device in a vehicle. Never place the device where the driver's field of vision is blocked. Make sure that the GPS antenna has a clear view of the sky.
- If the car's windshield is tinted with a reflective coating, an external antenna (optional) may be needed to route the antenna to the top of the vehicle through a window. When closing the window, be careful not to pinch the antenna cable.

### Using the Device Holder

Use the device holder to mount your device in a vehicle. Make sure that the GPS antenna has a clear view of the sky. (See the document supplied with the device holder for the installation instruction.)

 


### Connecting the Car Charger

The car charger supplies power to your device when you are using the device in a car.

**CAUTION:** To protect your device against sudden surges in current, connect the car charger only after the car engine has been started.

1. Connect one end of the car charger to the power connector of the cradle.
2. Connect the other end to the cigarette lighter in the car to power and charge your device. The indicator on the car charger lights in green to indicate that power is being supplied to your device.

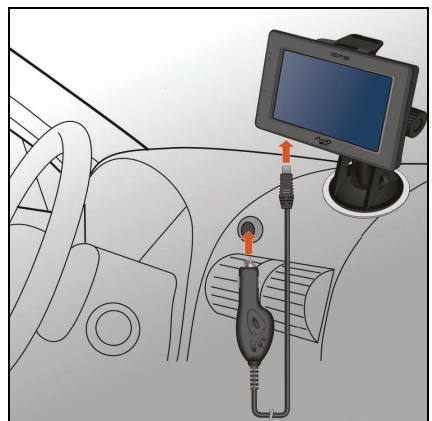

## 1.6 Operating Basics

### Turning On and Off

For normal operation, turn off the device by briefly pressing the power button. The device enters a suspended state.



When you next briefly press the power button, the system resumes. You will either be back to where you left off or see the Home screen.

**NOTE:**

- The screen you see after resuming depends on the program you were using when you suspended the device. Some programs will be closed when you suspend the device, meaning you can only see the Home screen after resuming.
- Pressing the power button for a longer duration has a different effect. See Section 13.1 for more information.

### Navigating on the Screen

To operate your device, touch the screen with your fingertip. You can perform the following actions:



- **Tap**  
Touch the screen once with your fingertip to open items or select onscreen buttons or options.
- **Drag**  
Hold your fingertip on the screen and drag up/down/left/right or across the screen.
- **Tap and hold**  
Tap and hold your fingertip until an action is complete, or a result or menu is shown.

## Home Screen

The first time you initialize your device, the **Home** screen appears. The **Home** screen is your starting place for various tasks. Tap a button to start a program or open another menu. When you exit a program, you are back to the **Home** screen.



 
No.	Button Name	Description	For Detailed Information
❶	MioMap	Starts the navigation software.	See the MioMap manual
❷	Video	Plays video clips.	Chapter 2
❸	Audio	Plays audio files.	Chapter 3
❹	Pictures	Displays picture files.	Chapter 4
❺	Mobile Phone	Searches for Bluetooth mobile phones for a connection.	Chapter 5
❻	Stereo	Searches for Bluetooth headsets for a connection.	Chapter 5




<b>7 Tools</b>	<b>Contacts</b> keeps a list of names, addresses, and phone numbers.	Chapter 6
	<b>Calculator</b> provides basic arithmetic, currency conversion, and measure conversion functions.	Chapter 7
	<b>File Manager</b> transfers multimedia files between a storage card and the device's flash memory.	Chapter 8
<b>8 Settings</b>	Customizes the system settings.	Chapter 9

## Using the Soft Keyboard


There are occasions when you input text or numbers to your device. For example, you have to enter names, addresses, and phone numbers in the Contacts program. On such occasions, the soft keyboard as shown below will appear on the screen. Depending on the current operation, either the alphabet keypad or the number/symbol keypad appears.

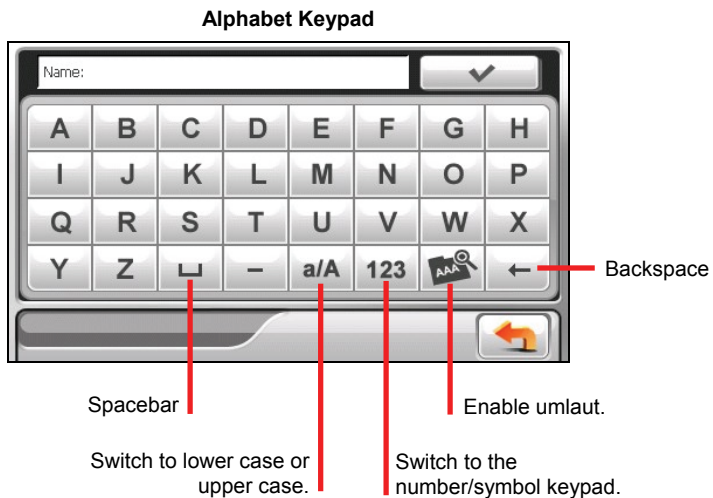


### Number/symbol Keypad

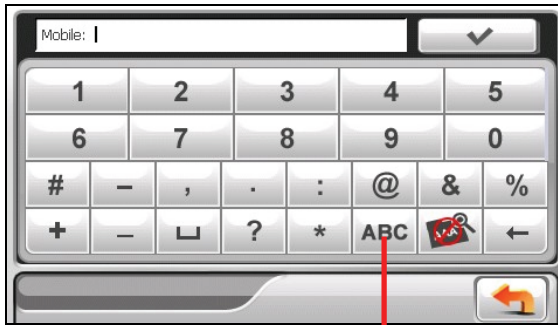 


Switch to the alphabet keypad.

 When you tap  to enable umlaut, you can tap a vowel letter repeatedly to input a different form of the letter. Alternatively, you can tap the letter in the pop-up window as shown below.

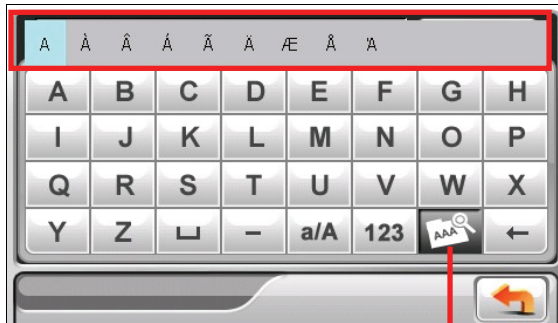

Umlaut enabled. Tap the button again to disable it.

After you complete an input, tap .

## 1.7 Inserting a SD/MMC Card

Your device has a SD/MMC slot where you can insert an optional Secure Digital or MultiMediaCard storage card. It supports up to 2GB storage card.

To use a SD/MMC card, insert it into the slot, with the connector pointing to the slot and its label facing the front of the device.



To remove a card, first make sure that no application is accessing the card, then slightly push the top edge of the card to release it and pull it out of the slot.

**NOTE:**

- Make sure that no foreign objects enter the slot.
- Keep a SD or MMC card in a well-protected box to avoid dust and humidity when you are not using it.



# 2

 
## Video


### 2.1 Starting and Exiting Videos

**CAUTION:** DO NOT view videos while driving. It may be illegal in your state for a display showing a video to be in view of the driver.

**Movie** allows you to watch the video clips on your device. (See later section for the formats that your device supports.)

Tap **Videos** to start the program.

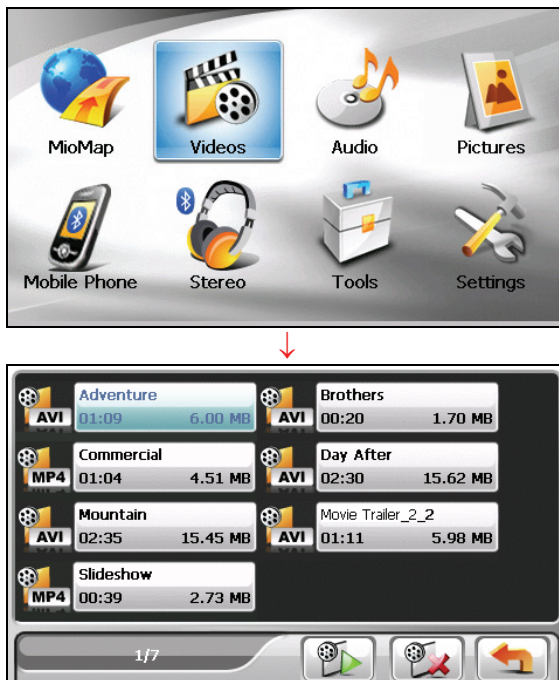

To exit the program, tap .

## 2.2 Preparing the Video Files for Your Device

Before using the program, have the files ready on either your device’s **My Flash Disk\ My Videos** folder or on a storage card.

Note that your device only supports video files in the following formats:

Formats	Video Codec	Audio Codec
MP4 (.mp4)	MPEG4	AAC/AAC+/eAAC+
MP4 (.mp4)	H.263	AAC/AAC+/eAAC+
MP4 (.mp4)	MPEG4	AMR-NB
MP4 (.mp4)	H.263	AMR-NB
QuickTime Movie (.mov)	MPEG4	AAC/AAC+/eAAC+
QuickTime Movie (.mov)	H.263	AAC/AAC+/eAAC+
AVI (.avi)	MPEG4	ADPCM
AVI (.avi)	DivX	MP3
3GP(.3gp)	MPEG4	AAC/AAC+/eAAC+
3GP(.3gp)	H.263	AAC/AAC+/eAAC+
3GP(.3gp)	MPEG4	AMR-NB
3GP(.3gp)	H.263	AMR-NB
ASF(.asf)	MPEG4	ADPCM
WMV (.wmv)	WMV	WMA

| **NOTE:** AVI supports only DivX 4 and DivX 5 playback.

Use **Video ToolBox** supplied with your device to convert video files to the format supported by your device. (See Chapter 11 for information.)



A tool called **Mio Transfer** is supplied for you to easily copy the files from your computer to the correct location. (See Section 10.3 for information.)

## 2.3 Playing Video Clips

1. If your files are in a storage card, insert the card into your device.
2. Tap **Videos** to start the program.
3. The program will search the matching files in the specific folder on your device and in all folders on a storage card. It then displays the video file list.

 










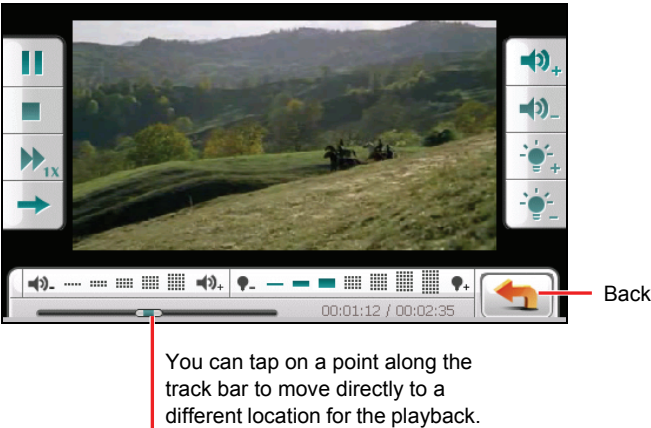



**NOTE:** The file information such as the length of the video and file size is displayed together with the file name.

4. To play a video file, tap  in front of the filename. Or, you can tap the filename and tap . (See the next section for descriptions of the onscreen control buttons.)



# 2.4 Video Playback Controls

During the playback, tap anywhere on the screen to open or close the onscreen control buttons. When the control buttons are closed, the video shows in full screen.



Control Button	Name	Description
 / 	Play/Pause	Play or pause the playback.
	Stop	Stop the playback.
	Fast Forward	Fast forward the video. Tap the button to switch to the next option.  →  → 
	Playback Mode	Switch to the next mode:  Single playback.  Repeated playback.
 / 	Backlight	Increase or decrease the video backlight. The indicator at the bottom shows the current brightness level.



Control Button	Name	Description
	Volume	Increase or decrease the volume. The indicator at the bottom shows the current volume level.
	Exit	Stop the video playback and return to the video list screen.



# 3

## Audio

### 3.1 Starting and Exiting Audio

**Audio** features:

- Playback of MP3/WAV/WMA files
- Basic playback controls such as play, pause, stop, next and previous
- Playback includes single selection playback, repeat, single repeat, sampling playback, normal sequence and random sequence.
- 11 preset equalizer audio profiles
- Play list support
- Background playback
- Lyrics display

Tap **Audio** on the Home screen to start the program.



The control panel appears on the screen where you can easily control the player by tapping the control buttons.



To exit the program, tap .

## 3.2 Preparing the Audio Files for Your Device


Before using the program, have the files (.mp3, .wav, or .wma) ready on either your device's **My Flash Disk\My Audio** folder or on a storage card.

A tool called **MioTransfer** is supplied for you to easily copy the files from your computer to the correct location. (See section 10.3 for information.)

## 3.3 Playing Audio Files

1. If your files are in a storage card, insert the card into your device.
2. Tap **Audio** on the Home screen to start the program.
3. The program will search for the supported audio files in your device and in the storage card. When files are detected, they will be added to the play list.

**| NOTE:** You can create your own play lists for future playback. (See section 3.6 for details.)

4. To start the playback, tap . To control the playback, use the control buttons as described later.
























The information area displays the current status including the play/pause/stop status, the elapsed time, the power status, the playback mode, the volume level, and the properties of the current song such as the artist (if available with the file), filename, total length, and stereo/mono information.

**NOTE:**

- During the playback, the screen backlight will automatically shut off if you haven't tapped the screen within the preset time (30 seconds by default). The backlight will restore when you press the power-button or when the playback of the current play list has ended.
- If the total length of a song exceeds 99 minutes and 59 seconds, the information area cannot correctly display the length because the maximum number allowed is 99:59. However, the playback of the song is not affected.

## 3.4 Playback Controls

Control Button	Name	Description
	Play/Pause	Plays or pauses the playback.
	Stop	Stops the playback.
	Previous/Next	Plays the previous or next file.
	Volume	Increase or decrease the volume. The indicator on the panel shows the current volume level.
	Track Bar	You can tap on a point along the track bar to move directly to a different location for the playback.

Control Button	Name	Description
	Playback Mode	Switches to the next mode:
	 Repeat One	Repeated playback of the current file.
	 Repeat All	Repeated playback of all files in the current play list in sequence.
	 Shuffle	Playback of all files in the current play list in random order.
	 Intro	Sampling (10 seconds) playback of all files in the current play list in random order.
	 Normal	Playback of all files in the current play list in sequence.
	Lyrics	Opens the lyrics display. Available only if the current song is with lyrics. (See section 2.5 for more information.)
	Minimize	Minimizes the control panel and play the music in the background.
	Play List	Opens the play list. (See section 2.6 for more information.)
	Equalizer	Opens the equalizer panel. (See section 2.7 for more information.)
	Settings	Opens the Settings screen for setting up power saving mode and accessing help. (See Section 2.8 for more information.)
	Exit	Closes the program and returns to the Home screen.

## 3.5 Displaying Lyrics

The program allows you to display the real-time lyrics on the screen while playing songs. This feature is especially handy for you to sing along with the songs.

### Preparing the Lyrics Files for your Device


To display the lyrics, you need to have the lyrics files (.lrc) ready on your device's **\My Flash Disk\My Audio\Lyric\** folder or the **\My Audio\Lyric\** folder on your storage card.

| **NOTE:** You can search and download these .lrc files from the Internet.

Use **MioTransfer** to copy the lyrics to the correct location of your device. (See Section 10.3 for information.) When copying a lyric file to your device, be sure to use the same filename as the audio file. For example, if a MP3 file is named **My Love.mp3**, the lyrics filename must be **My Love.lrc**.

| **NOTE:** When playing songs with lyrics, the 30s backlight shut off feature will be disabled.

### Playing Songs with Lyrics

The  button is available when you're playing a song with lyrics. Tap this button to view the lyrics.




As the song plays, the lyrics scroll line by line on the screen, with the current line highlighted by a different color. The background image changes in turn at a specific time interval.

To close the lyrics screen and go back to the control panel, tap anywhere on the screen.



## 3.6 Using the Play Lists

You can create your own play lists for future use.

 
### Creating a Play List



1. Tap  on the control panel to open the play list screen. The screen shows the current play list.

 



2. To add a song to the play list, tap .
3. A screen appears displaying all the audio files. Tap the song(s) you wish to add and then tap .

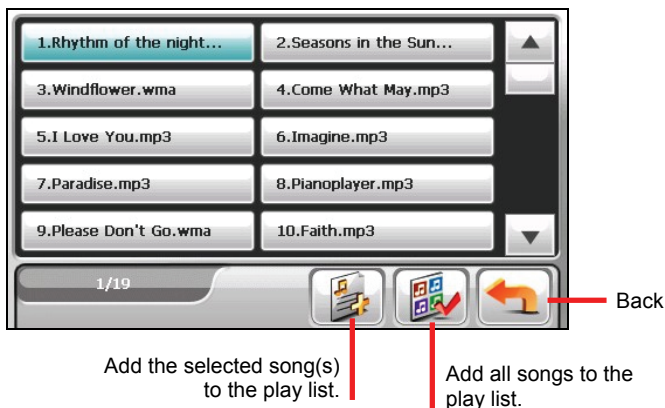



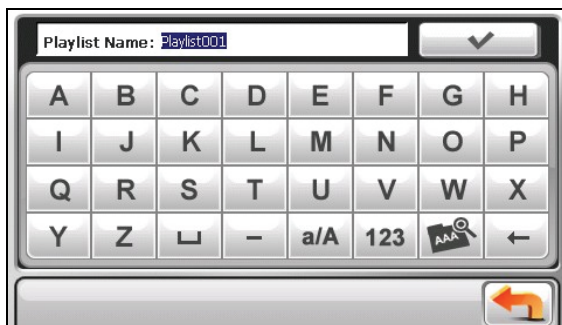

4. To save the play list, tap .
5. The keyboard screen appears where you can change the default name of the play list. Rename the play list if you want. Tap  when finished.




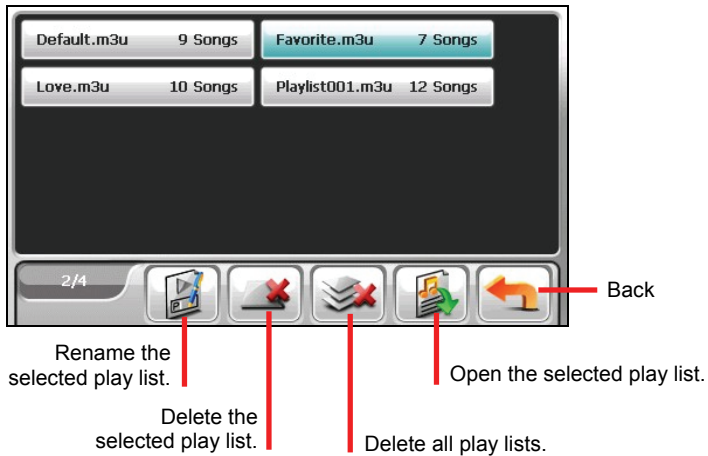 
6. To return to the control panel, tap .


## Opening a Play List

To open one of the play lists that you have created:


1. Tap  on the control panel.
2. Tap  to display all the play lists you have created.

 
3. Tap the play list you want to open and tap .






4. To return to the control panel, tap .


## 3.7 Equalizer

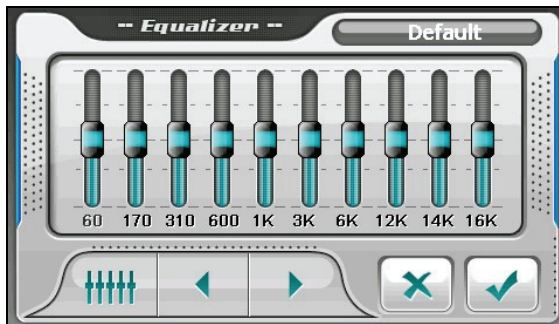The program provides 11 preset audio profiles. Tap  to open the equalizer panel.




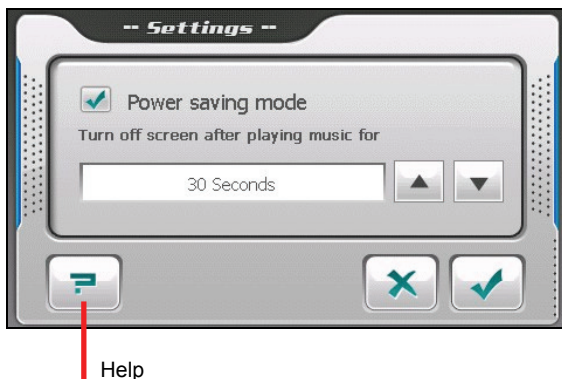 
Tap  or  to cycle through the available options: *Default, Rock, Pop, Jazz, Classical, Dance, Heavy, Disco, Soft, 3D and Hall.*


Tap  to save your selection and return to the control panel.

To select the *Default* profile, tap .


## 3.8 Settings

Tap  on the control panel. The Settings screen appears.



**NOTE:** To know the function of each button, you can tap . Then tap the button on the list to display a description line on the right side of the screen.

Tap the check box (✓) to turn on the power saving mode. Tap the up/down button to set the timer to *10 seconds*, *30 seconds*, *1 minute*, or *5 minutes*. During the playback, the screen backlight will automatically shut off if you haven't tapped the screen within the preset time (30 seconds by default). The backlight will restore when you press the power button or when the playback of the current play list has ended.

Tap  to save any changes you have made.



# 4

## Pictures

### 4.1 Starting and Exiting Pictures

**Pictures** allows you to view pictures in JPG, JPEG, and BMP formats and view the slideshow of the pictures on your device.

Tap **Pictures** on the Home screen to start the program.



To exit the program, tap .

### 4.2 Preparing the Pictures for Your Device

 
Before using the program, have the files (.jpg, .jpeg, or .bmp) ready on either your device's **My Flash Disk\My Pictures** folder or on a storage card.

**NOTE:** The Pictures program does not support the display of BMP files in 32-bit and above color depth formats.


A tool called **MioTransfer** is supplied for you to easily copy the files from your computer to the correct location. (See Section 10.3 for information.)


## 4.3 Viewing Pictures in Thumbnail View


1. If your files are in a storage card, insert the card into your device.
2. Tap **Pictures** on the Home screen o start the program.
3. The program will search the matching files in the specific folder on your device and in all folders on a storage card. It then displays the pictures in the thumbnail view. You can press the **Up** or **Down** arrow button to go to next or previous page.

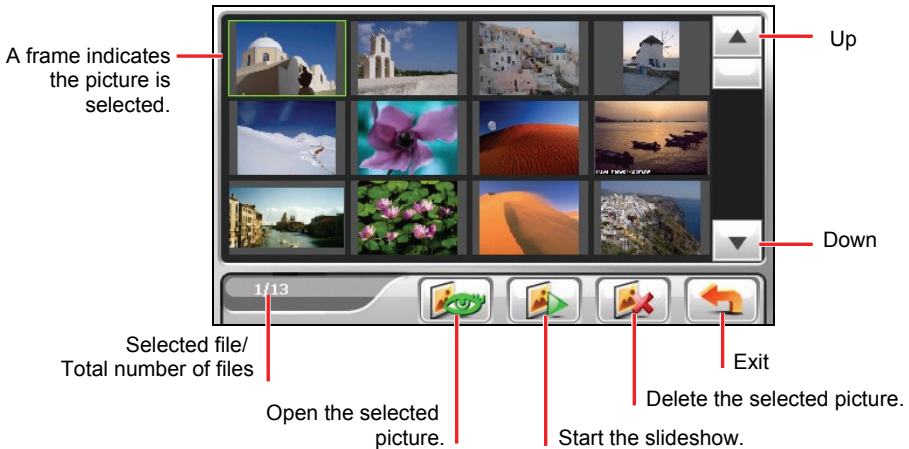

## 4.4 Viewing a Picture in Full Screen

When you tap a picture twice in the thumbnail view, the picture is displayed in full screen. Or, you can tap a picture and then tap .

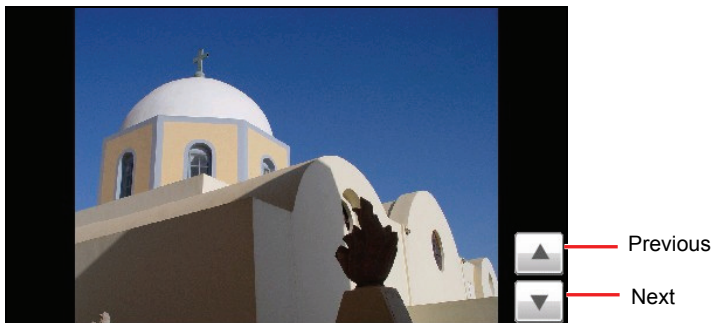 






To go back to the thumbnail view, tap anywhere on the screen to display the control buttons and then tap  .



## 4.5 On-Screen Control Buttons

On-screen control buttons provide various functions and settings. Tap anywhere on the picture to display the buttons as shown below. To close the buttons, tap the picture again.



Control Button	Name	Description
	Slideshow	Starts the slideshow. (See Section 3.6 for detailed information.)
	Interval	Sets the length of time each slide is displayed before moving on to the next slide. Tap the button to switch to the next available option. 1 second 3 seconds 5 seconds
	Information	Enables or disables the displaying of the name and date of the file.
	Delete	Deletes the current picture.
	Brightness	Tap the button to adjust the brightness of the picture.



---

	Zoom	Tap the button to zoom in to 1.2x, 1.5x, 1.8x, or 2.0x, or, after zooming in, to zoom out. When you have zoomed in the picture, you can drag the picture to view other parts of the picture.
	Back	Goes back to the thumbnail view.

---

## 4.6 Viewing the Slideshow

To view the slideshow of all your pictures, use one of the following ways:

- When in the thumbnail view, tap  to start the slideshow.
- When in full screen, tap anywhere on the picture to display the on-screen control buttons. Then tap  to start the slideshow.



To stop the slideshow, tap anywhere on the screen.



# 5

## Bluetooth

### 5.1 About Bluetooth Profiles

Your device incorporates Bluetooth wireless communications technology. Devices with Bluetooth capabilities can exchange information over a distance of about 10 meters (30 feet) without requiring a physical connection.

Your device supports Bluetooth profiles as below:

- **Hands-free Profile (HFP)**

Allows your device to serve as a hands-free device for a Bluetooth mobile phone. You can tap your device to place and receive phone calls instead of picking up the mobile phone, and can use the built-in speakers and microphone for your conversation.

- **Advanced Audio Distribution Profile (A2DP)**

**NOTE:**

- Not all Bluetooth devices support all profiles. Check the document of a Bluetooth device to know its Bluetooth capabilities.
- By default, the Bluetooth radio is on when the device power is on. When necessary, you can turn off the Bluetooth radio on your device. (See Section 9.8 for information on Bluetooth settings.)

## 5.2 Connecting a Bluetooth Mobile Phone

### Connecting a Mobile Phone for the First Time

**NOTE:** This chapter tells you how to initiate the Bluetooth connection from your device. If you want to initiate the Bluetooth connection from a Bluetooth mobile phone, make sure that your device is in discoverable mode. (See Section 8.8 for information.)

1. Make sure that the Bluetooth mobile phone is in discoverable mode.
2. Tap **Mobile Phone** on the Home screen.



3. The program will search for nearby Bluetooth mobile phones if this is the first time you try to connect a mobile phone.



**NOTE:** If no device is detected, the screen shows the shortcut menu. (See the shortcut descriptions later in this section.)

4. The search result will show on the screen. Tap the mobile phone you want to connect.



5. Tap the soft keyboard to enter the passkey (within 16 characters).



6. Enter the same passkey on your Bluetooth mobile phone so that the connection can be established. Depending on the mobile phone model, you may need to select the hands-free service to complete the connection.
7. When the connection is completed, a message will appear on the screen. Tap **Yes**.
8. The shortcut menu appears with the name of the connected device on top of the screen. A check mark indicates that the device is connected. Tap **Back** to display the Mobile Phone main menu.



9. In the Mobile Phone main menu, you can place phone calls by tapping buttons on the screen. (See Section 5.3 for information.)



10. You can tap **Back** to minimize the screen and use other functions of the device.

## Connecting a Different Mobile Phone

To connect a mobile phone that is not already in the shortcut list:

1. If you are in the Mobile Phone main menu, tap **Connect to Phone**.



2. In the shortcut menu, tap **Find Others**.



## Using the Mobile Phone Shortcut

Once a Bluetooth connection has been established, the shortcut will be saved. When you next tap the **Mobile Phone** button on the Home screen, the program will try to connect the last paired mobile phone.

You can also tap a particular shortcut button in the shortcut menu to connect the particular mobile phone.



Delete the selected shortcut.

**NOTE:**

- All shortcuts will be cleared if you shut down the device.
- The program can save up to 15 shortcuts. A 16th shortcut will replace the oldest one.

 
## Disconnecting the Mobile Phone

Tap the connected device in the shortcut menu and tap **Disconnect** when the message appears asking you to select your operation.

## 5.3 Phone Operations

### Placing a Call

After pairing with a mobile phone (as described in Section 5.2), you can place a call with the onscreen keypad, phone book, or call history.

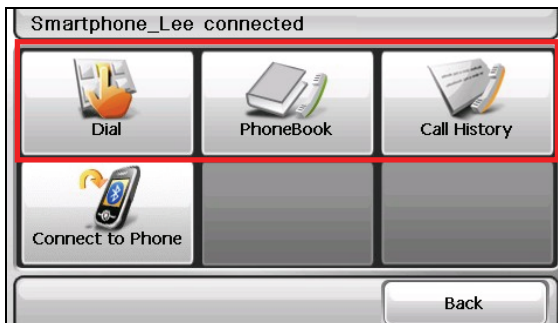

## Dial



By tapping the **Dial** button in the Mobile Phone main menu, you can enter the telephone number with the onscreen keypad. After entering the telephone number,

tap



to place the call.



### NOTE:

- International calls require a country code to be included in the phone number. On your device, the country code is separated from the rest of the number sequence by a plus (+) sign. If you are making an international call, tap and hold the **0** key until the + sign appears.
- To delete the last digit entered, tap the **Backspace** button. Tap and hold the button for about 1 second will clear the entire number.

## Phone Book



By tapping the **Phonebook** button on the Mobile Phone main menu, you can select a phone number to call.

The program can display two types of phone books.

- **Local phone book**

This is the phone book from the device's Contacts program. (See Chapter 4.)

- **Remote phone book**

This is the phone book downloaded from the mobile phone during the first time connection. Depending on your mobile phone, this type of information may not be downloadable.

#### NOTE:

- When a mobile phone different from the previous one is connected, a message will appear asking if you want to replace the previous remote phone book with the current remote phone book.
- If you need to refresh the remote phone book, tap **Get Phone Number** to download the phonebook from the mobile phone again.

This icon indicates a contact from the mobile phone's phone book.



When a contact has more than one phone numbers, all numbers will appear in the list with the letter “m” meaning mobile phone, “h” meaning home, and “w” meaning work.

On the phonebook screen, tap the phone number to call.

**NOTE:** To remove the mobile phone's phone book from your device, use Bluetooth settings as described in Section 8.8.



## Call History

By tapping the **Call History** button on the Mobile Phone main menu, you can select a recent phone number to call.

The program can display two types of call history.

- **Local call history**

 
This is the call history from your device.

- **Remote call history**

This is the call history from the connected mobile phone. Depending on your mobile phone, this type of information may not be downloadable.

**NOTE:** When a mobile phone different from the previous one is connected, a message will appear asking if you want to replace the previous remote call history with the current remote call history.



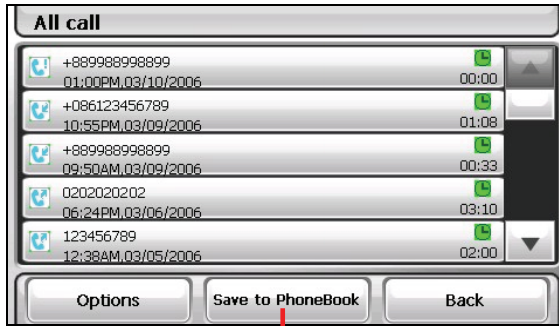


Save the selected phone number to the Contacts program.

By default, the list shows the incoming, outgoing, and missed calls. You can filter the calls by tapping **Options**.

**| NOTE:** To clear the call history, use Bluetooth settings as described in Section 8.8.


## Receiving a Call

 After pairing with a mobile phone (as described in Section 5.2), your device will ring and display the incoming call screen when there is an incoming call.

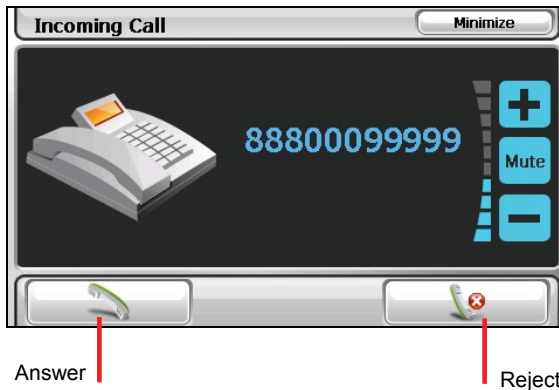


Answer

Reject

By default, your device automatically answers the call in 3 seconds. To reject the call, tap  within 3 seconds.

**| NOTE:** You can change the response time or disable the automatic answer feature. (See Section 8.8.)


## Operations during a Call

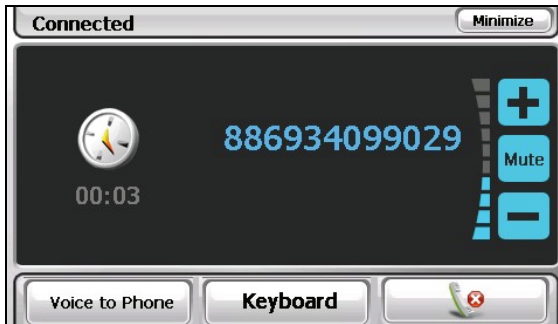 

During a phone call:

- If you need to input other numbers, such as an extension number, tap **Keyboard** to open the keypad and tap the digits.



- Tap **Mute** to mute your sound so that the other party cannot hear you. To end the mute mode, tap the button again.
- Tap  to end the call.
- Tap **Voice to Phone** to switch the call to your mobile phone. To transfer back, tap the button again.
- Tap **Minimize** to minimize the screen and to back to the previous screen.

## 5.4 Connecting a Bluetooth Headset

### Connecting a Headset for the First Time

1. Make sure that the headset to connect is a stereo Bluetooth headset.
2. Tap **Stereo** on the Home screen.



3. The program will search for nearby Bluetooth headsets if this is the first time you try to connect a headset.



**NOTE:** If no device is detected, the screen shows the shortcut menu. (See the shortcut descriptions later in this section.)

 
4. The search result will show on the screen. Tap the headset you want to connect.



5. Tap the soft keyboard to enter the passkey. (Check the headset manual for the passkey.)



6. When the connection is completed, a message will appear on the screen. Tap **Yes**.
7. The shortcut menu appears with the name of the connected device on top of the screen. A check mark indicates that the device is connected.

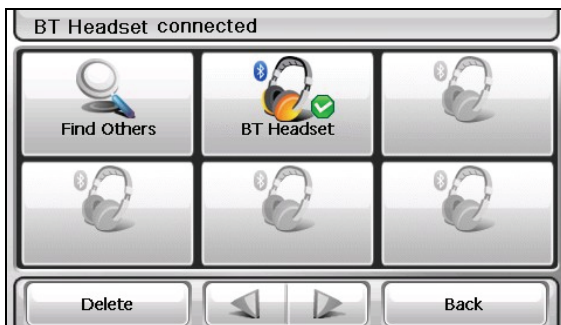

8. You can tap **Back** to go back to the Home screen.

## Connecting a Different Headset

To connect a headset that is not already in the shortcut list, tap **Find Others** in the shortcut menu.

## Using the Headset Shortcut

Once a Bluetooth connection has been established, the shortcut will be saved. When you next tap the **Connect to Headset** button on the Home screen, the program will try to connect the last paired headset.

You can also tap a particular shortcut button to connect the particular headset.



Delete the selected shortcut.

### NOTE:

- All shortcuts will be cleared if you shut down the device.
- The program can save up to 15 shortcuts. A 16th shortcut will replace the oldest one.

## Disconnecting the Headset

Tap the connected device in the shortcut menu and tap **Disconnect** when the message appears asking you to select your operation.



# 6

## Contacts

### 6.1 Starting and Exiting Contacts


**Contacts** allows you to keep a list of names, addresses, and phone numbers.

**NOTE:** If you have created Microsoft Outlook Contacts information on your computer, you can copy the information to your device. (See Section 10.4 for information.)

Tap **Tools** on the Home screen and then tap **Contacts** to start the program.



The contacts list appears.

To exit the program, tap .

## 6.2 Using the Contacts List

After starting Contacts, the contacts list appears. It shows the names and phone numbers (mobile phone numbers by default) of your contacts.

You can use the various buttons on the screen to search a contact, navigate to the address of a contact, call a contact, and so on.

Tap one of the alphabet sets to quickly find a contact.

#abcdefghijklmnopqrstuvwxyzz

Tap twice to display the summary screen of a contact.

Bob White  
123456789

David Lake  
987654321

Helen Brown  
112233445

Mary Lee  
2227890

1/4

Navigate to the address of the selected contact.

Call the selected contact.

Add a contact.

Edit the selected contact.

Delete the selected contact

 
Exit

**NOTE:** If you have transferred the phone book from a Bluetooth mobile phone to your device (as described in Section 5.3), the contacts will also appear in the list.




## 6.3 Using the Summary Screen


In the contact list, tapping a contact twice displays the summary screen of the contact.

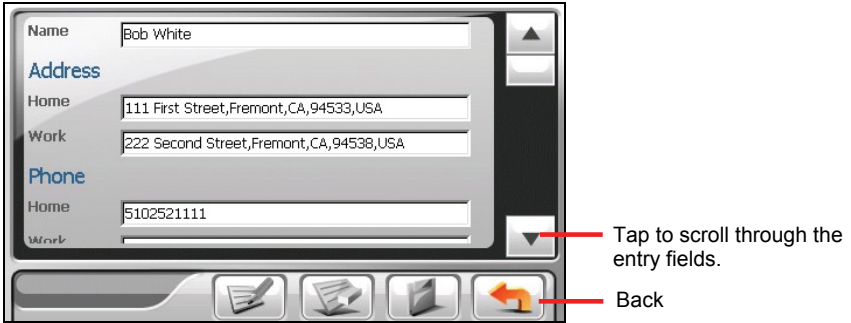


## 6.4 Navigating to a Contact's Address

You can set a contact's address as your GPS navigation destination.

  1. Tap the **Contacts** button on the Home screen to start the program.
2. In the contact list, select the desired contact and tap .

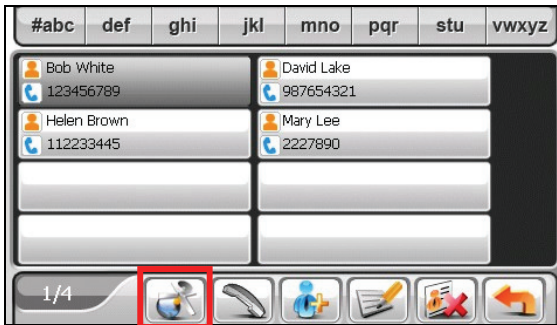


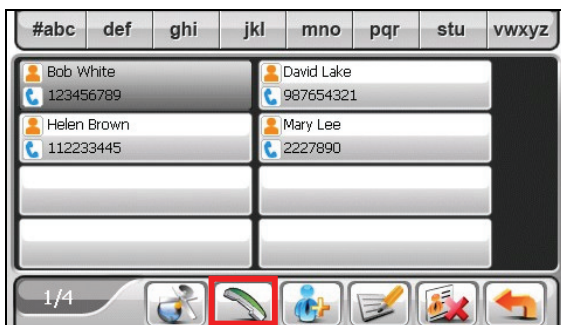 
3. Tap  to select the home address or  to select the work address.

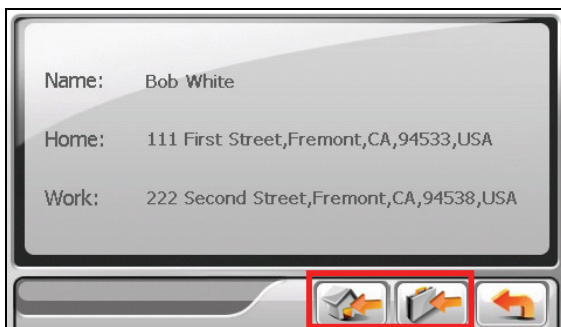




4. The navigation program starts. (See the document supplied with the navigation software for more information.)


## 6.5 Making a Phone Call to a Contact

 1. Connect your device with a Bluetooth mobile phone as described in Section 5.2.
2. Tap the **Contacts** button on the Home screen to start the program.
3. In the contact list, select the desired contact and tap .



**| NOTE:** The call button is available for use only when a Bluetooth mobile phone is connected.

4. Tap  to call the home number,  the work number, or  the mobile phone number.

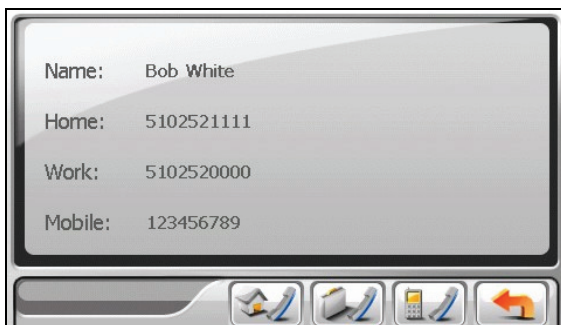



## 6.6 Managing Contacts

### Adding a Contact


1. Tap the **Contacts** button on the Home screen to start the program.

 2. Tap .

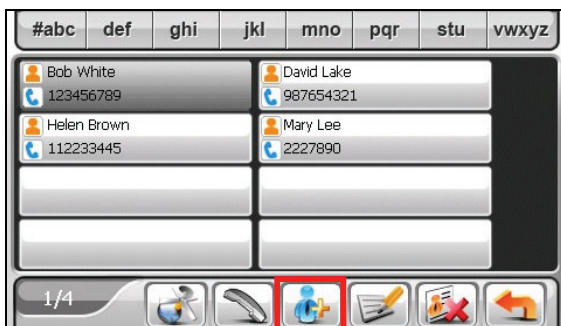


3. Tap an entry field twice. Or, tap a field and then tap . The soft keyboard appears.

A screenshot of a contact form interface. It features a list of labels on the left: 'Name', 'Address', 'Home', 'Work', 'Phone', 'Home', and 'Work'. To the right of these labels are corresponding input fields. The 'Name' field is at the top, followed by 'Address' (with sub-fields for 'Home' and 'Work'), and 'Phone' (with sub-fields for 'Home' and 'Work'). At the bottom of the form, there is a row of four icons: a notepad and pencil, a printer, a laptop, and a red arrow pointing left.

4. Use the soft keyboard to enter the information in the field and tap .


A screenshot of a soft keyboard interface. At the top, there is a text input field labeled 'Name:' and a button with a checkmark icon. Below the input field is a grid of letters A through Z, arranged in four rows. The bottom row includes special keys: a spacebar, a hyphen/underscore key, a key with 'a/A', a key with '123', a key with a magnifying glass and 'AAA', and a back arrow key. At the bottom right of the keyboard, there is a red arrow pointing left.

5. Enter the information in other fields such as address and phone number fields. You will need to scroll down to see all available fields.

**NOTE:** When entering the address, the soft keyboard guides you through different parts of the address including street, city, state, post, and country. After entering a part, tap  to proceed to the next part.




A screenshot of a soft keyboard interface for numeric entry. At the top, there is a text input field labeled 'Mobile:' and a button with a checkmark icon. Below the input field is a grid of numbers 1 through 0, arranged in three rows. The bottom row includes special keys: a plus key, a hyphen/underscore key, a key with a magnifying glass and 'AAA', a key with a question mark, a key with an asterisk, a key with 'ABC', a key with a magnifying glass and 'AAA', and a back arrow key. At the bottom right of the keyboard, there is a red arrow pointing left.

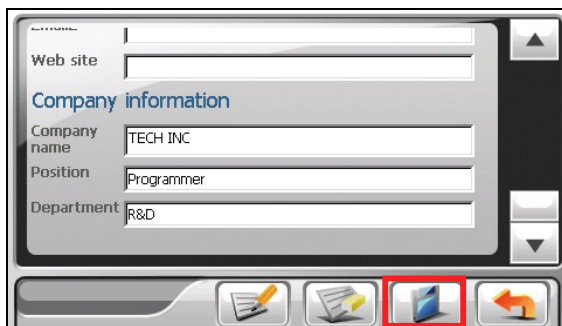 6. Tap  save the contact's information and return to the contact list.




## Editing a Contact

To modify a contact's information:

1. In the contact list, tap the contact twice to open the summary screen.  
- or -  
In the contact list, tap the contact and then tap .
2. Tap twice the field you want to edit and use the soft keyboard to edit. If you want to clear a field, tap the field and then tap .
3. Tap  to save the changes.

## Deleting a Contact

In the contact list, select the contact you want to delete and tap .



# 7

## Calculator

 
### 7.1 Starting and Exiting Calculator


**Calculator** provides three modes: **Calculator**, **Currency**, and **Conversion**. You can use these modes to perform basic arithmetic, currency conversion, and measure conversion functions.

Tap **Tools** on the Home screen and then tap **Calculator** to start the program.




You will see the calculator screen. To switch to another mode, tap one of the buttons at the top right corner of the screen.

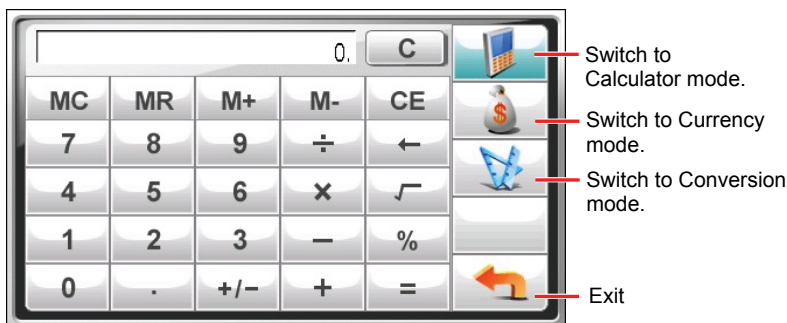



To exit the program, tap .

## 7.2 Using the Calculator Mode

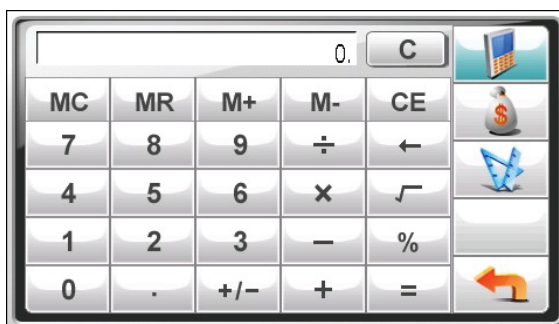 The Calculator mode allows you to perform any of the standard operations for which you would normally use a handheld calculator.

 






If you are currently not in the Calculator mode, tap the  button.

Tap the numeric keypad to enter numbers and mathematical symbols. Then tap the  button to generate the result.

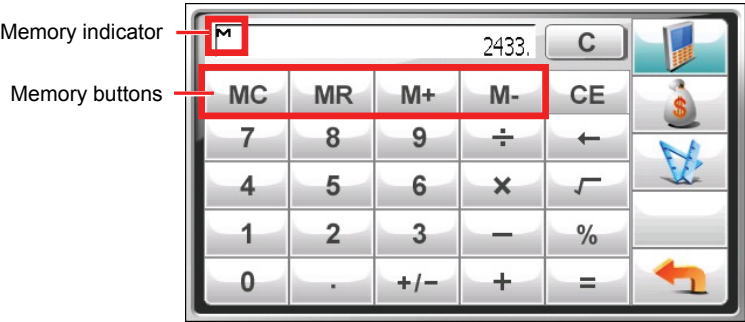


# Calculator Memory

  


Button	Name	Description
	Memory Cancel	Clears the value in memory.
	Memory Recall	Shows the value in memory.
	Memory Plus	Adds the current value to the value in memory.
	Memory Minus	Subtracts the current value from the value in memory.


## 7.3 Using the Currency Mode

 Use the Currency mode to perform the currency conversion. You can also edit the exchange rate.

 
1. Start the Calculator program as described in Section 7.1.
2. Tap  to switch to the Currency mode.

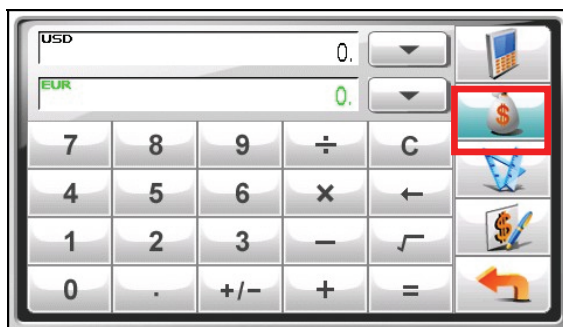

 3. Tap the down arrow next to the input field to display a list of currencies and select the currency to convert from. When a currency is selected, the abbreviation of the currency will be displayed on the upper left corner of the input field.

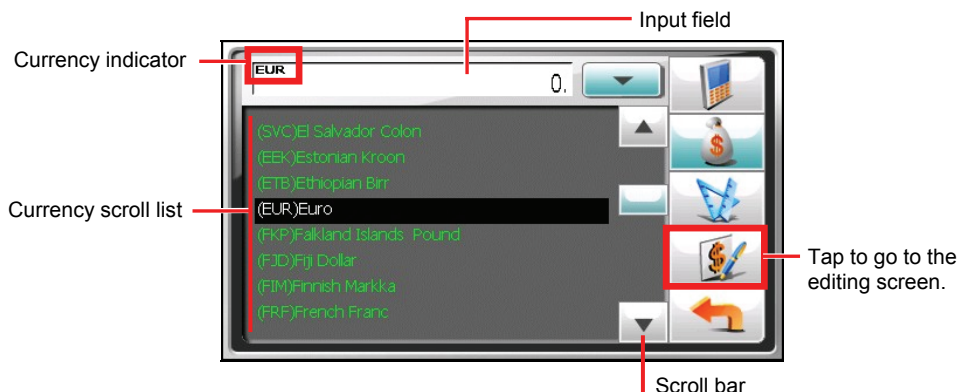

 4. Tap the down arrow next to the output field to display a list of currencies and select the currency to convert to. When a currency is selected, the abbreviation of the currency will be displayed on the upper left corner of the output field.

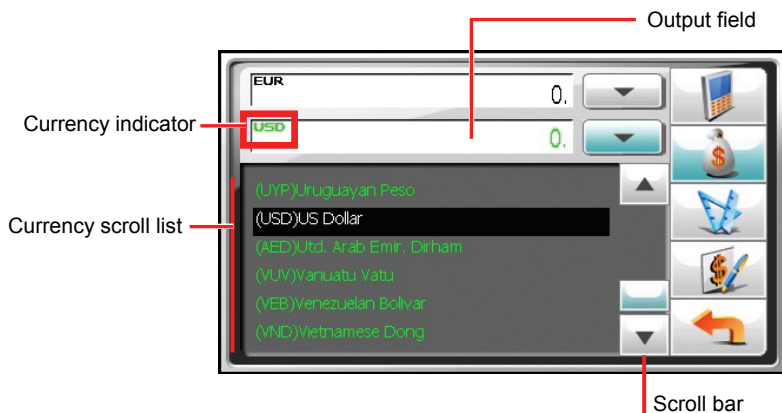

5. Enter the currency value in the input field by tapping the number buttons on the numeric keypad. You can also perform basic arithmetic in the input field.



The converted currency immediately appears in the output field.



**NOTE:** The program uses the default exchange rates unless you change them. (See the sub-section below for information.)

## Editing Exchange Rate

Before performing the currency conversion, you can edit the exchange rate to the most up-to-date one.


1. Tap  on the Calculator screen.
2. Select the source and target currency.
3. Tap .

 
4. Enter the exchange rate and tap  to save the changes and go back to the previous screen.



## 7.4 Using the Conversion Mode

The Conversion mode allows you to convert measures from one unit to another.


1. Start the Calculator program as described in Section 7.1.
2. Tap  to switch to the Conversion mode.

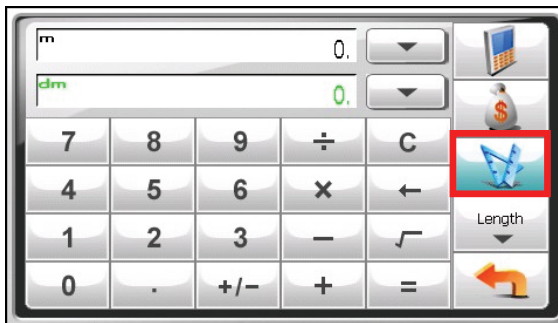


3. Tap the measure button to display a scroll list of measures. Select the desired measure from the list.



 4. Tap the down arrow next to the input field to display a list of units and select the unit to convert from. When a unit is selected, the abbreviation of the unit will be displayed on the upper left corner of the input field.

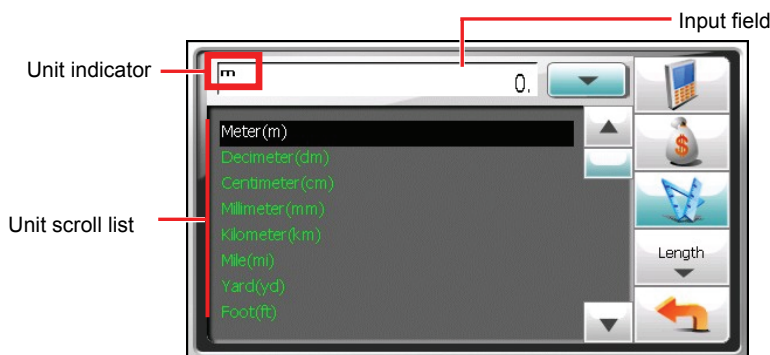

 5. Tap the down arrow next to the output field to display a list of units and select the unit to convert to. When a unit is selected, the abbreviation of the unit will be displayed on the upper left corner of the output field.

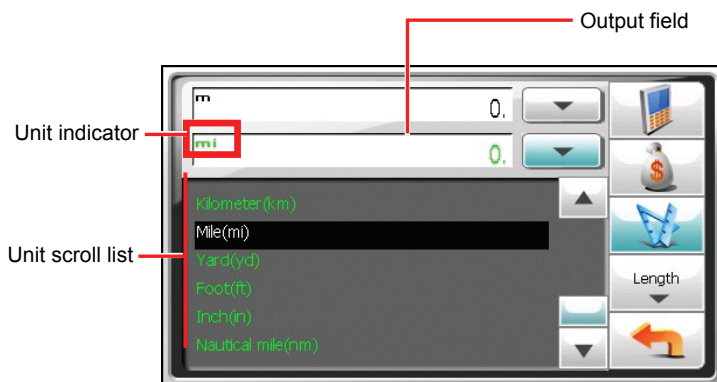

- Enter the value in the input field by tapping the number buttons on the numeric keypad. You can also perform basic arithmetic in the input field.

The converted value immediately appears in the output field.



# 8

## File Manager

 
### 8.1 Starting and Exiting File Manager

**File Manager** allows you to transfer multimedia files between your device and a storage card.

Tap **Tools** on the Home screen and then tap **File Manager** to start the program.



The File Manager screen shows specific folders of your device in the left column and the folder(s)/file(s) of the storage card, if inserted, in the right column.

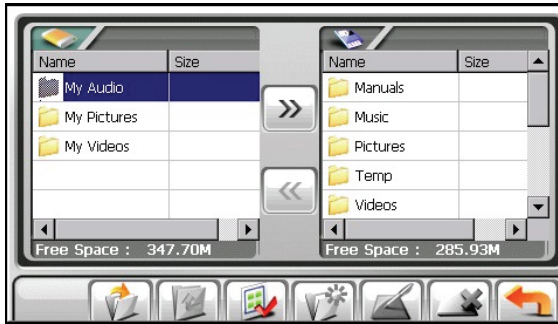

**NOTE:** The left column shows only “specific” folders in the **My Flash Disk** of your device. “Specific” folders refer to pre-defined data folders for multimedia programs (such as **My Audio** folder for the Audio program). Other folders are not accessible within the File Manager program.


To exit the program, tap .

## 8.2 Transferring Files

 
### From the Storage Card to Your Device

1. Insert the storage card.
2. Tap **Tools** on the Home screen and then tap **File Manager** to start the program.


By default, the first folder of your device’s **My Flash Disk** is highlighted.

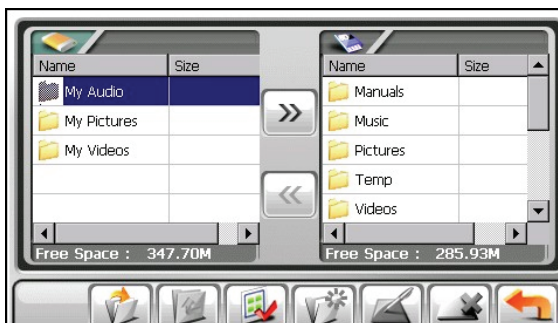


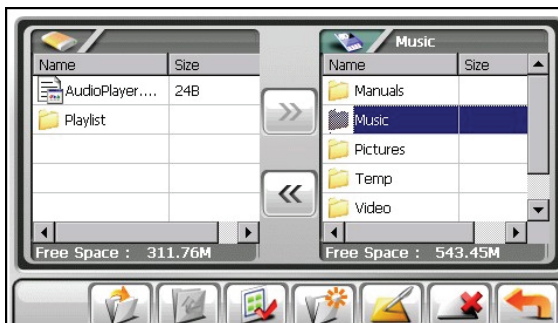 


3. To select the target folder, tap twice the folder in the left column to open it.  
Or, tap the folder and then tap  to open the folder.




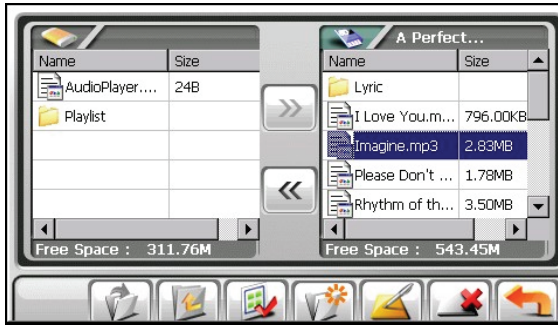 
4. If the source file is in a folder of the storage card, tap twice the folder in the right column to open the folder. Or, tap the folder and then tap  to open the folder.


If you want to select all folders, tap .



5. Select your source file by tapping it in the right column.


If you want to select all files, tap .



**NOTE:** To go up one level, tap .




6. Tap  to copy the selected file to the target folder.

## From Your Device to the Storage Card

Use the same method as described in the previous sub-section to copy files from your device to the storage card except that the direction is from the left column to () the right column.

## 8.3 Managing Folders and Files

In addition to copying files, File Manager provides the below functions:

-  **Rename**  
Changes the name of the selected folder/file.
-  **Delete**  
Deletes the selected folder/file.
-  **New Folder**  
Creates a new folder in the selected folder.

**NOTE:** You cannot rename or delete the pre-defined folders of your device. You cannot create new folders in the root level of your device.

# 9


## Settings

### 9.1 Starting and Exiting Settings

You can customize the system settings such as backlight brightness, volume, and language. Once you change the settings, the new settings will remain until you change them again.

Tap the **Settings** button on the Home screen. The Settings menu appears as shown below.



To exit Settings, tap .

 
The following sections describe the various buttons and their functions.


## 9.2 Backlight

1. Tap the **Settings** button on the Home screen.
2. Tap the **Backlight** button.



3. Move the knob along the track bar to adjust the brightness of the backlight. To darken the backlight, move the knob to the left. To lighten the backlight, move the knob to the right.

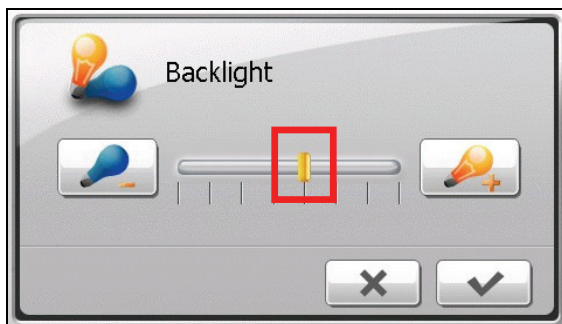

4. Tap  to save the changes.

## 9.3 Volume

1. Tap the **Settings** button on the Home screen.
2. Tap the **Volume** button.



3. Move the knob along the track bar to adjust the volume. To decrease the volume, move the knob to the left. To increase the volume, move the knob to the right.




4. Tap  save the changes.

## 9.4 Screen

You can calibrate the touch screen if it is not responding accurately to your taps.

 
1. Tap the **Settings** button on the Home screen.
2. Tap the **Screen** button.




3. Tap  to start the calibration.



4. Tap and hold the centre of the target.

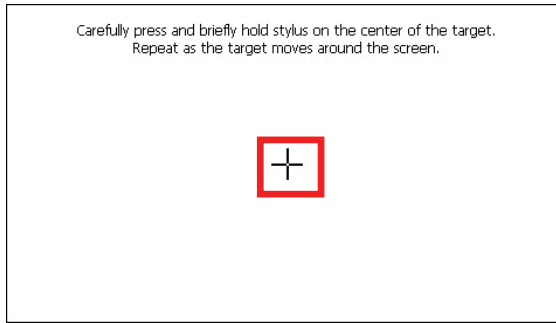


5. When the target moves to another position, tap and hold the centre of the new target. Repeat each time to complete the calibration process.
6. When completed, tap .

## 9.5 Power

 To check the remaining power level of your battery and/or set up the power saving feature:

1. Tap the **Settings** button on the Home screen.
2. Tap the **Power** button.

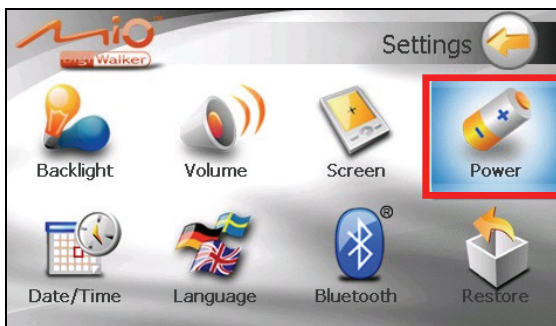

3. The screen shows the remaining power of your battery.

You can set a timer to automatically turn off your device when it is idle for a set period of time. The options include **Never**, **30 minutes**, **20 minutes**, and **10 minutes**.



4. Tap  to save the changes.

## 9.6 Date/Time

1. Tap the **Settings** button on the Home screen.
2. Tap the **Date/Time** button.



 
3. To change the time zone, tap the arrow in the “Time Zone” item.






4. To change the date, tap the down arrow in the “Date” item. A calendar pops up. Tap the left arrow on the calendar to go to the earlier month and year or the right arrow to the later month and year. Alternatively, you can tap the month or year on top of the calendar to directly change the month or year.

When the calendar shows the current month, tap the date on the calendar.

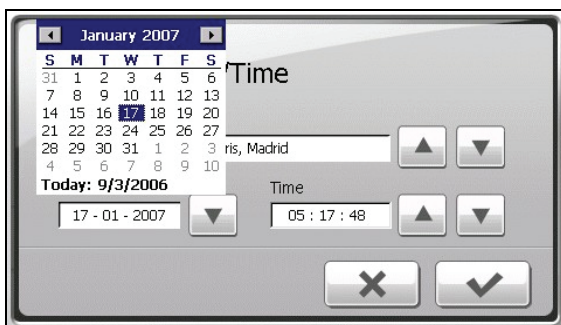

5. To set the time, first tap the hour, minute, or second in the “Time” item and then tap the up arrow to increase or down arrow to decrease the value.
6. Tap  to save the changes.



## 9.7 Language

1. Tap the **Settings** button on the Home screen.
2. Tap the **Language** button.



3. Tap the up/down arrow button to select the desired language.



4. Tap  to save the changes.
5. Tap the  button for the new setting to take effect.

## 9.8 Bluetooth

6. Tap the **Settings** button on the Home screen.
7. Tap the **Bluetooth** button.

 


8. The “Bluetooth Settings” screen contains 3 buttons as described below.



9. After you complete your settings in a screen, tap **Done**.
10. Tap **Back** to go back to the Settings screen.


## BT Preferences

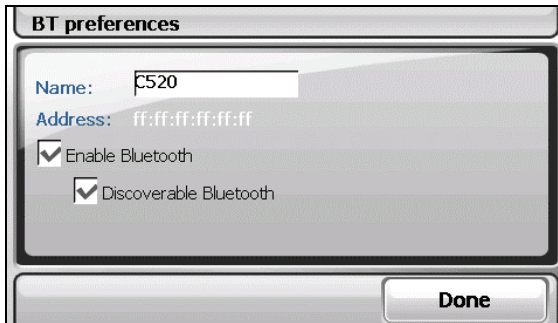

The setting items in the “BT preferences” screen are:


- **Name**  
Tap twice this field if you want to rename the Bluetooth device name. A soft keyboard appears for you to enter the new name.
- **Enable Bluetooth**  
The Bluetooth radio is on when this item is checked. Uncheck this item if you want to turn off the Bluetooth radio.
- **Discoverable Bluetooth**  
Check this item to make your device discoverable for other Bluetooth devices. You can check this item only if the previous item is enabled.

## Auto-answer Preferences

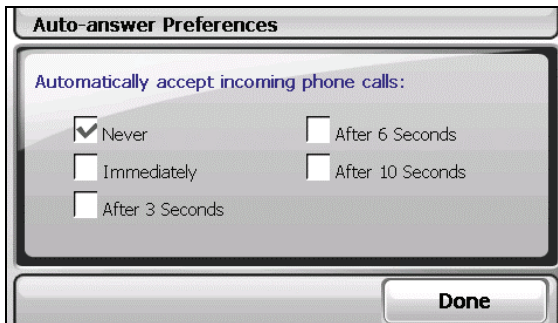 

You can specify how soon your device automatically answers an incoming call. If you want to manually answer a call, select **Never**.

## Delete Preferences

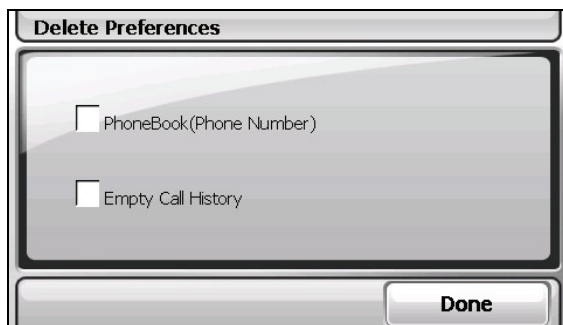 

Whenever you want to delete particular data as listed below, check the corresponding item(s) in the “Delete preferences” screen.

- Phonebook (phone number)
- Empty call history

A message will appear on the screen asking if you want to permanently delete the data. Tap **OK**.

## 9.9 Restore

To restore the settings to factory default values:

1. Tap the **Settings** button on the Home screen.
2. Tap the **Restore** button.



 
3. Tap .

# 10 MioTransfer

## 10.1 Installing MioTransfer

**MioTransfer** allows you to easily transfer data such as MP3 and photos between your device and a computer. To install MioTransfer to your computer:

1. Turn on your computer and insert the supplied CD/DVD into the CD/DVD-ROM drive of your computer.
2. When the language selecting screen appears, click the language that you wish to install from.
3. Click **Install MioTransfer**.

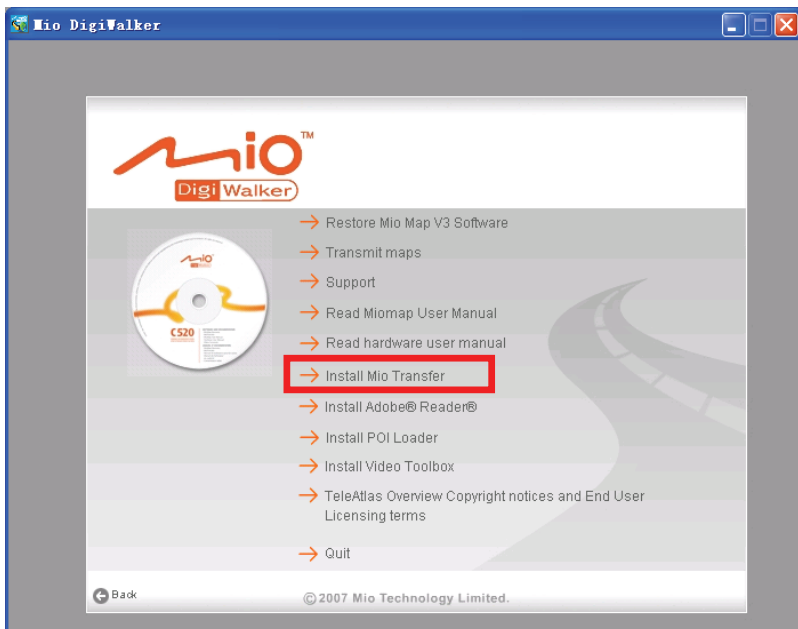

- Click **Next**. Follow the onscreen instructions to complete the installation.

**NOTE:** If MioTransfer has already been installed on your computer, clicking **Install MioTransfer** will remove the application from your system.

## 10.2 Starting and Exiting MioTransfer

Click **MioTransfer** icon on the Windows Desktop to start the program. The MioTransfer screen appears.



It provides the following tools:

- **Audio**  
Allows you to transfer the audio files between your device and your computer. (See Section 10.3 for details.)
- **Videos**  
Allows you to transfer video files between your device and your computer. (See Section 10.3 for details.)
- **Pictures**  
Allows you to transfer pictures between your device and your computer. (See Section 10.3 for details.)



- **Contacts**

Allows you to copy the **Microsoft Outlook Contacts** information from your computer to your device. (See Section 10.4 for details.)

- **Mio Online**

Provides link to the Mio website.

 
To exit MioTransfer, click **Exit** at the bottom right corner of the screen.

**CAUTION:** Before disconnecting the cable, you must click the device icon in the task bar and click “Safely remove xxx” (where xxx is the name of your device). If you are transferring data, disconnecting the cable without following the correct removal procedure can result in data loss.

## 10.3 Copying Multimedia Files to Your Device

Before playing multimedia files such as MP3 files, you need to have the files ready on your device. Use MioTransfer to copy the files from your computer to the correct location on your device.

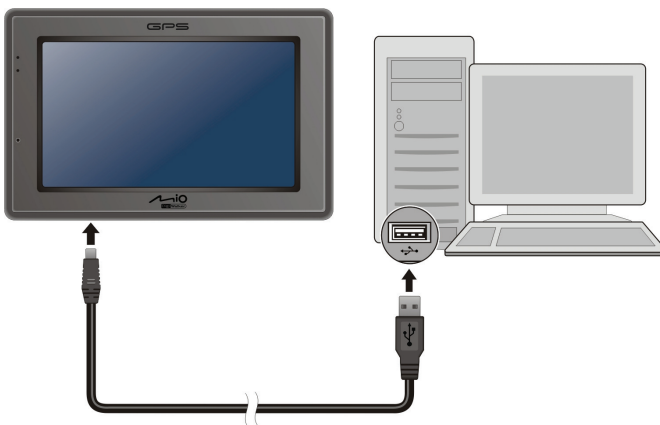

1. If you want to copy files to a storage card, insert the card to your device.
2. Turn on your computer and your device.
3. Connect the mini-USB end of the USB cable to the bottom of your device and the other end to a USB port on your computer.

 


4. Start MioTransfer by clicking **MioTransfer** icon on the Windows Desktop. The MioTransfer screen appears.



5. Select the type of file to copy:

- To copy audio files, click **Audio** on the top menu bar.
- To copy video files, click **Videos** on the top menu bar.
- To copy photos or pictures, click **Pictures** on the top menu bar.

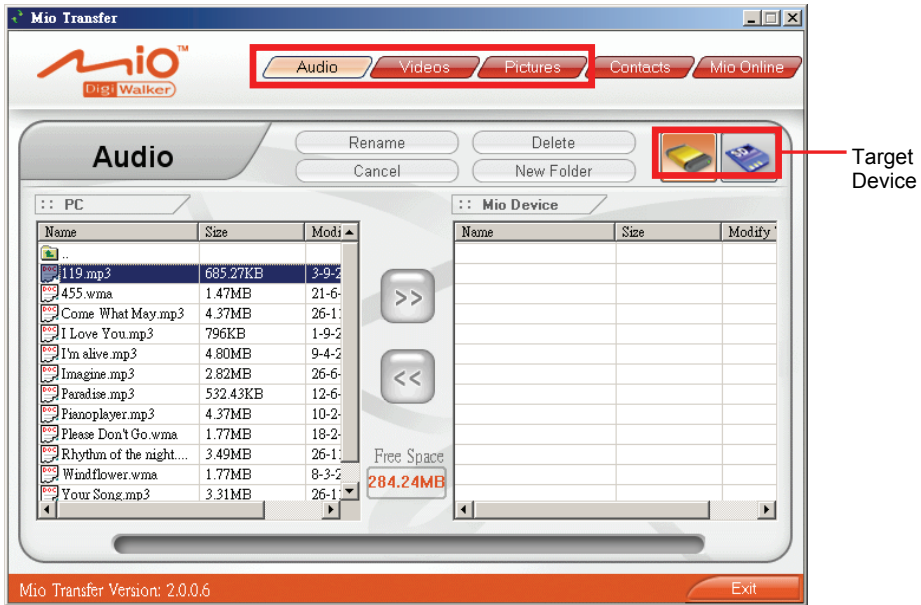The left column shows the drives of your computer and the right column shows the files in the appropriate folder of the target device (either  or ).




6. Select your target device by clicking one of the icons:

-  - the flash memory of your device
-  - a storage card inserted into your device.

7. Select the folder where your audio or picture files are from the left column.

Select the file you want to copy and tap . The status bar will indicate the

progress of file transfer and the selected file will be copied to the target device.

**NOTE:** You can also copy files from your device to your computer. First select the file you want to copy from the right column and select a folder on the left column to place these files. Then click  to start the file transfer.

## Managing Files

 
Various buttons are available for you to manage the files:

- **Rename**  
Changes the name of the selected file.
- **Delete**  
Removes the selected file.
- **Cancel**  
Aborts the ongoing action of file transfer.
- **New Folder**  
Creates a new folder in the selected drive or folder.


## 10.4 Copying Contacts Information to Your Device

You can copy the Microsoft Outlook Contacts information from your computer to your device using MioTransfer. This saves you the time for entering the information all over again on your device or on your computer. (For information on Contacts, see Chapter 6.)

1. Turn on your computer and your device.
2. Connect the mini-USB end of the USB cable to the bottom of your device and the other end to a USB port on your computer.

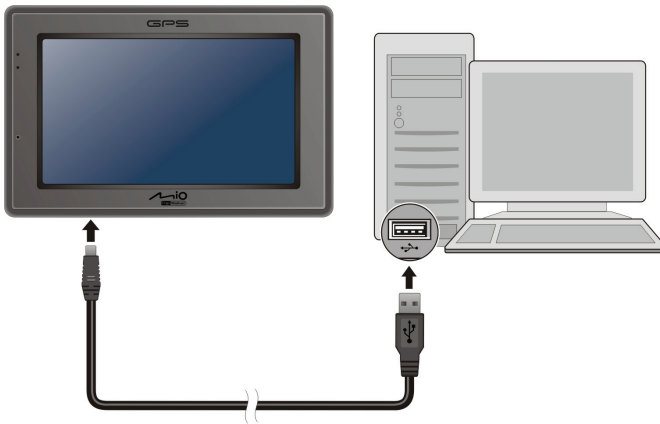

 3. Start MioTransfer by clicking **MioTransfer** icon on the Windows Desktop. The MioTransfer screen appears.
4. Click **Contacts** on the top menu bar.
5. Select your option and click **Apply**.

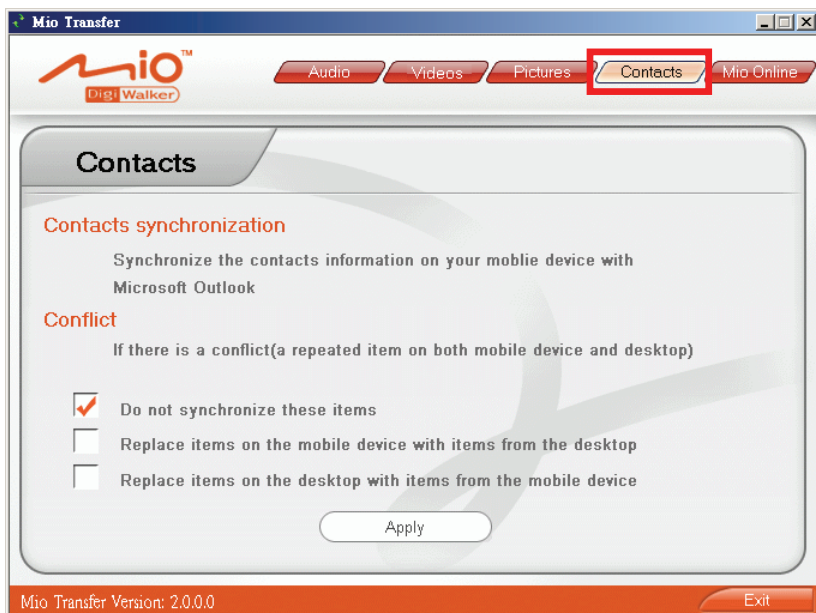



# 11

## Video ToolBox

### 11.1 About Video ToolBox

 
**Video ToolBox** allows you to import media in a variety of sources and save it in a specific file format so you can watch the video on your device. You can also use the editing tools such as trimming the clip and adding special effects to create a customized project.

### 11.2 Installing Video ToolBox

1. Turn on your computer and insert the Application CD/DVD into the CD/DVD-ROM drive of your computer.
2. When the Language Selecting screen appears, click the language that you wish to install from.
3. Click **Install Video Toolbox** and follow the onscreen instructions to finish the installation.



# 11.3 User Interface

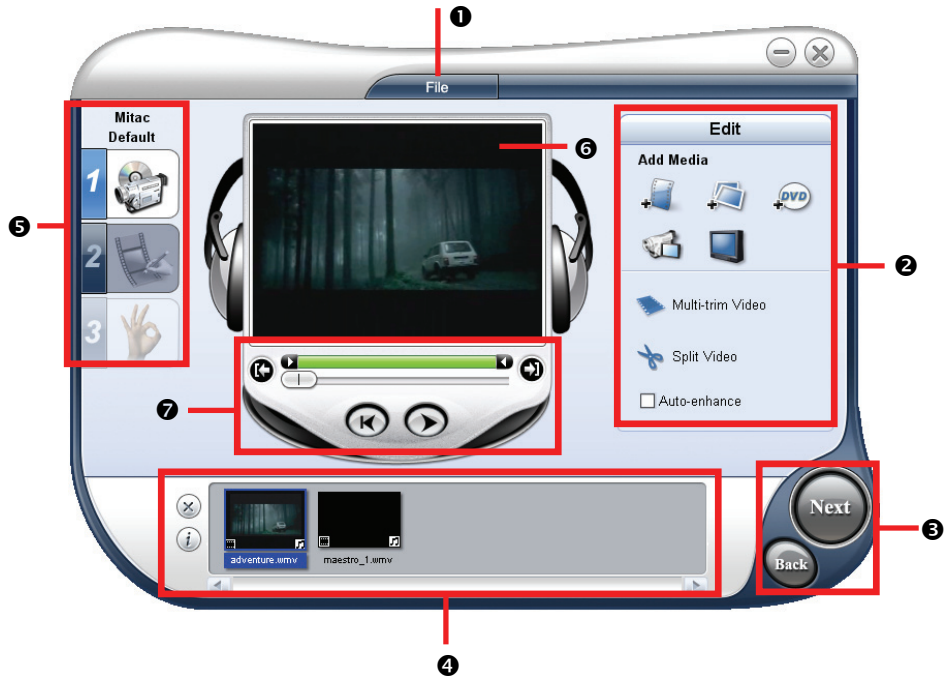

Ref	Name	Description
❶	File menu	Select to open a menu where you can save your project file and set project preferences.
❷	Options Panel	Displays controls, buttons, and other information that you can use to customize the project. The contents of this panel change depending on the step you are in and the selected project element.
❸	Step buttons	Click to go to the next or previous step.
❹	Media Clip List	Displays the clips, transition effects and text that are used in the project. Click  to remove the clip from the Media Clip List or click  to view the selected clip's properties.
❺	Step Panel	Displays buttons that correspond to the different video editing steps.
❻	Preview Window	Displays the video playback.







## 11.4 Four Steps to Create a Video File


### Step 1: Determine Video Output Setting

1. On Windows desktop, click **Start → Programs → Video ToolBox 2.0 Home Edition → Video ToolBox 2.0 Home Edition**.
2. On the first screen, click **Enter**.



### Step 2: Add/Edit Media Clip

3. Click one of the **Add Media** buttons depending on your media source. (For detailed information, see sections 11.5 to 11.7.)
  - To add a video file, click .
  - To add an image file, click .
  - To add video from a DVD-Video or DVD-VR discs, click .
  - To add video from a digital source (e.g. DV camcorder), click .

- To add video from an analog source (e.g. TV tuner card), click .



4. Click **Next** to continue.

### Step 3: Choose Style

 
5. If you want, you can choose a movie style from the available themes and edit movie style elements. If you do not want to apply a style for your project, select the default white theme. (See Section 11.8 for details.)



6. Click **Next** to continue.

## Step 4: Create Video File

7. Click **Create** to save your video file in the selected output video format.

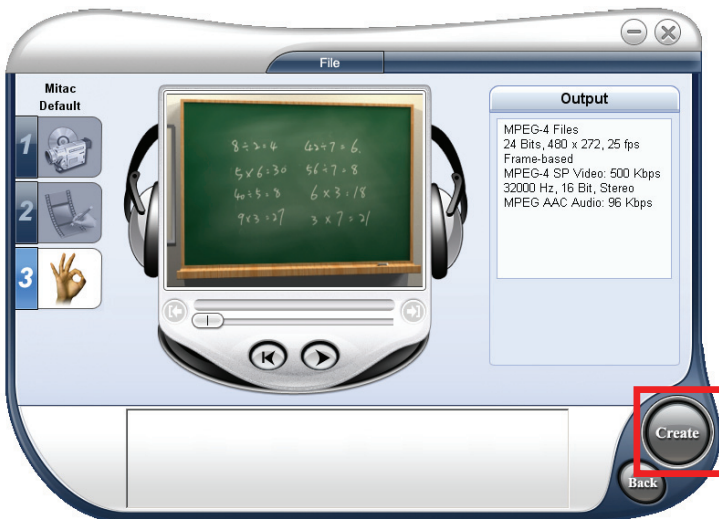

8. In the dialog box, enter the filename and click **Save**.

## 11.5 Adding Media Clips

### Inserting Clips into Your Project



Insert video, image and DVD/DVD-VR video into the project's Media Clip List. To insert a clip, just click an **Add Media** button and in the dialog box that opens, locate the file and click **Open/OK**.

**NOTE:** Video ToolBox can only import DVD videos from non-copy-protected DVD discs or folders.

### Capturing Digital Video

Video ToolBox lets you capture video from DV devices such as DV camcorders. Video ToolBox automatically saves the captured video in the DV AVI format.



To capture digital video:

1. Click  (Capture Digital Video).
2. Click  (Toggle Display).
3. Specify a **Capture folder** in which to save video files.
4. Click **Options** to open a menu for customizing more capture settings. The available options in the menu depend on the selected capture plug-in.
5. Use the Navigation Panel to scan your video to search the part to capture. The device control must be properly set up to be able to control the DV camcorder. To set up the device control, click **Options** and select **Select Device Control**. In the dialog box, select the device control to use in **Current device**.
6. When you locate the start of the section that you want to capture, click **Capture Video** to start capturing.
7. Click **Stop Capture** or press the **Esc** key to stop capturing.
8. Click **OK**.

## Capturing Analog Video

When footage is captured from analog sources such as VHS, Video8, or TV, it is converted to a digital format that can be read and stored by the computer. Video ToolBox automatically saves the captured video in the DV AVI format.

To capture analog video:

1. Click  (Capture Analog Video).
2. Click  (Toggle Display).
3. Specify a **Capture folder** in which to save video files.
4. Click **Capture Video** to start capturing. Click **Stop Capture** or press the **Esc** key to stop capturing.
5. Click **OK**.

## Capturing Still Images

In addition to capturing video, Video ToolBox also allows you to capture still images when the source is digital video or analog video. Images are saved in JPEG format and the size depends on the source video's frame size.

To capture still images, click **Capture Image** when you see the image you want to capture in the Preview Window.

## 11.6 Editing Video Clips



When video clip(s) are added, the editing tools include:

- **Multi-trim Video**  
Allows you to choose desired segments from a video file and extract them.
- **Split Video**  
Cuts the selected clip into two.
- **Auto-enhance**  
Select to automatically adjust the hue, saturation, brightness and the contrast of the clip.

## Trimming a Clip

To split a video clip:

1. Select the clip you want to split on the Media Clip List.
2. Drag the Jog Bar to the point where you want to cut the clip.



3. Click **Split Video** to cut the clip into two clips.



To remove one of these clips, select the unwanted clip and click .




To trim a video clip with the Trim Bar:

1. Select the clip you want to split on the Media Clip List.
2. Click and drag the Trim handles on the Trim Bar to set the Mark-in/Mark-out points on the clip.

 



3. Drag the Jog Bar to the point in the clip that you want to set as the start/end of the clip then click   .(Mark-in/Mark-out).


## Trimming a Video into Multiple Clips

1. Click **Multi-trim Video** on the Options Panel.
2. In the **Multi-trim Video** dialog box, view the whole clip first by clicking  to determine how you want to mark segments. If you want to mark segments to retain, click **Selection Mode** then select **Retain selection**.

Otherwise, select **Delete selection** if you prefer to mark segments that you want taken out from the clip.

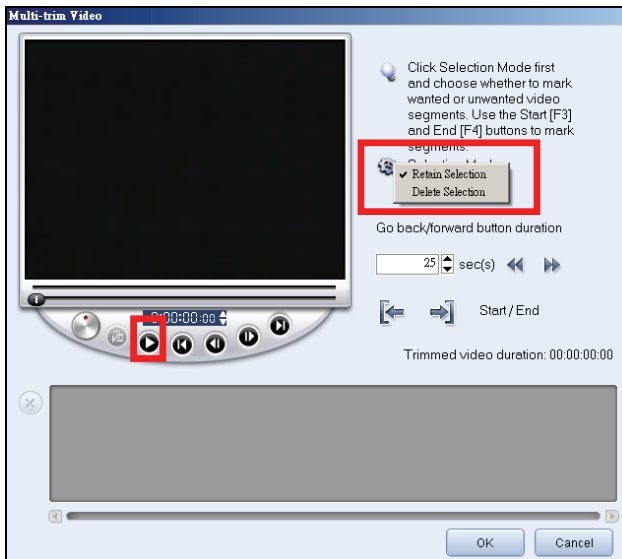

3. Drag the Jog Bar until you locate the point in the video that you want to use as the beginning frame of the first segment. Click  (Start).

Drag the Jog Bar again, this time, to the point where you want the segment to end. Click  (End).









4. Repeat step 3 as required until you have marked all the segments you want kept or removed.




5. Click **OK** when finished. The video segments that you kept are then inserted onto the Media Clip List.

Multi-Trim Video Control

Control Button	Description
	Reverses or advances through the video in fixed increments. By default, these buttons move up or down through the video in increments of 25 seconds. To change this, tap the up or down arrow to adjust the value.
	Click and hold to open the speed bar. Select a speed and hold it there to quickly reverse or advance through the video.
	Plays the trimmed segments.
	Plays the whole video.
	Moves to the start or end frame of a trimmed segment.
	Moves to the previous/next frame in the video.

## 11.7 Creating an Image Slideshow

You can create a video slideshow using your images. To create, click  (Insert Image) and, in the dialog box, select the images (press **Ctrl** or **Shift** to select multiple files) you want to include in the slideshow and click **Open**. The duration of each image can be set in the Preferences dialog box.

 


Use the rotate buttons   to change the orientation of the selected image.

Rearrange the clips in the Media Clip List by dragging and dropping the clip to the desired position.

## 11.8 Choosing a Style


A style refers to a set of attributes including beginning/ending clips, transition effects, and background music.

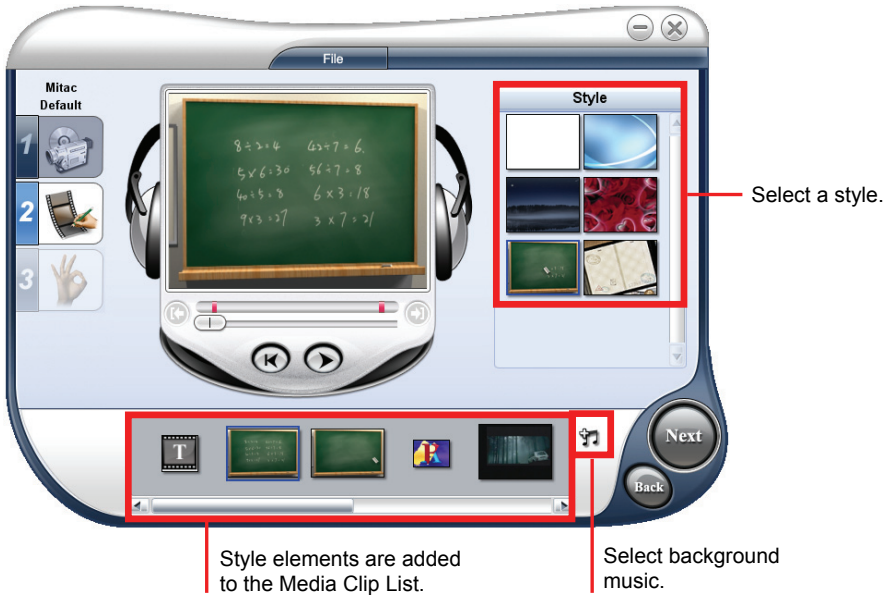

### Selecting a Movie Style

In the Options Panel, click the style you want to use.

 A beginning clip and an ending clip in the selected style will be added to your project.

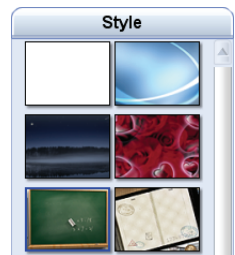


## Changing the Transition Effect

With multiple video clips or image files in the Media Clip List, default transition effects are applied to the project according to the style selected.

### To change the transition effect

 1. In the Media Clip List, click the transition effect you want to change.

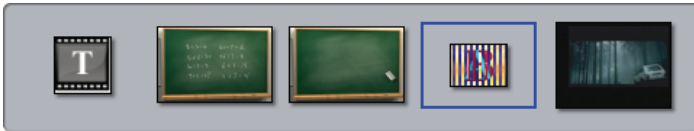


2. In the Options Panel, select a transition effect from the drop-down menu.

**NOTE:** You can click **Delete All** to remove all transition effects in the Media Clip List.



## Editing Text

 
3. In the Media Clip List, click the beginning or ending text you want to edit.

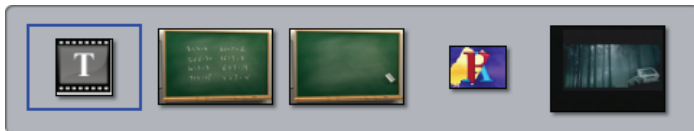



 4. In the Preview Window, double-click the text box to edit the text. Click an empty space in the Preview Window when you are done editing the text.

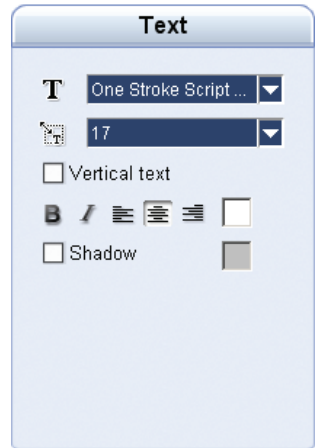

5. Adjust the text attributes using the settings in the Options Panel.
  - **Font face** Select your desired font style.
  - **Font size** Set your desired font size.
  - **Vertical text** Makes the orientation of the title vertical.
  - **Font style** Set the text as bold, italic and/or underlined.
  - **Alignment** Aligns horizontal text to the left, center, or right. Or, aligns vertical text to the top, center, or bottom.
  - **Color** Specify your preferred font color.
  - **Shadow** Select to add a shadow to the text. Click the color box to change the shadow color.




## Change the Background Music

 1. Click the  button.
2. In the Options Panel, click  **Open Audio File**. In the dialog box, locate the audio file you want to use for your background music and click **Open**.

**NOTE:** You can click  to remove the background music from the project.

3. Use the Volume slider to adjust the volume of the background music with respect to the video's audio. Dragging the slider to the left increases the volume of the background music and decreases the volume of the video's audio.
4. Select **Normalize Audio** to automatically adjust the volume to a standard level. This is useful when the background music used is recorded at varying volume levels.

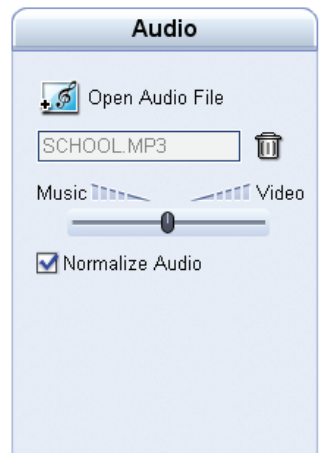



# 12 POI Loader

## 12.1 Installing POI Loader

With **POI Loader**, you can import a list of favorite locations from your computer to your device. The locations will be added to the **My POI** category of the **POI** function of MioMap. (See MioMap manual for information on POIs.)

1. Turn on your computer and insert the supplied CD/DVD into the CD/DVD-ROM drive of your computer.
2. When the language selecting screen appears, click the language that you wish to install from.
3. Click **Install POI Loader**.



4. Click **Next**. Follow the onscreen instructions to complete the installation.

## 12.2 Preparing the Source Files

The source files can be .xls or .csv files. The file must contain the following data:

- Longitude
- Latitude
- Name

The “Longitude” and “Latitude” fields are numerical values of the WGS84 system. The letter N/S/E/W before the value indicates the hemisphere North/South/East/West. If the letters are omitted, the program will simply match the values to your location of hemisphere (where you purchased your device).

In the “Name” field, give the location a name. If it is a location of speed camera, use the format *Name@Speed*, where *Speed* is the speed limit. Note that the unit of speed limit must be the same as the default unit of MioMap.

### Excel File Format Example

Enter longitude in the first column, latitude in the second column, and name in the third column. Shown below is an example.

	A	B	C
1	N50.9311952	E4.2565993	Hometown
2	N50.9311	E4.25801	Speed Camear@50
3			

### CSV File Format Example

You can use a text editor or spreadsheet program that supports the CSV (Comma Separated Value) file format to enter the data. In a CSV file, fields/columns are separated by the comma character and records/rows separated by newlines. Shown below is an example.

```
N50.9311952,E4.2565993,Hometown
N50.9311,E4.25801,Speed Camear@50
```



## 12.3 Importing POIs

**NOTE:** When importing .xls files, make sure that your computer has Microsoft Excel installed.

1. Have the .xls or .csv files ready on your computer. (See section 12.2 for the file structure.)
2. Insert an SD card to your device. This is where the POIs will be imported.
3. Connect your device to your computer.
4. Click the **POI Loader** shortcut on the Windows desktop.
5. Click **Next**.
6. Select your device from the pull-down menu that lists all the available removable disk(s) connected to your computer.

In case you connect the device after POI Loader starts, you can click **Search** to refresh the list.



7. Click **Browse** to select the folder containing the source files.

**NOTE:** You can only specify the folder, not the file. All valid files in the selected folder will be loaded.



8. Click **Next**.

**CAUTION:** Before disconnecting the cable, you must click the device icon in the task bar and click “Safely remove xxx” (where xxx is the name of your device). If you are transferring data, disconnecting the cable without following the correct removal procedure can result in data loss.

## Using the Imported POIs with Your Device

Every time you want to use your POIs, you must insert the SD card before running MioMap. MioMap will load the data from the SD card and refresh the POIs.

**NOTE:**

- Inserting the SD card after MioMap is started does not make the program load the data.
- Such POIs will not be saved to your device after you exit MioMap.

# 13

## Troubleshooting and Maintenance

### 13.1 Restart and Shut Down

Occasionally, you may need to reset your device. For example, you should reset your system when it stops responding; or appears to be “frozen” or “locked up.”

#### Restarting Your Device

To restart your device, press the power button for 5 seconds until the “Power Off Selection” screen appears and then tap **Restart**.



#### Shutting Down Your Device

To shut down your device, press the power button for 5 seconds until the “Power Off Selection” screen appears and then tap **Shutdown**.

Alternatively, you can press the power button for 10 seconds to directly shut down the device. This is useful when a software failure prevents the “Power Off Selection” screen from displaying.

Shutting down puts the device in a deep sleep state. The device will close all running programs before shutting down. To use the device again, press the power button for 5 seconds. The Home screen appears.

## 13.2 Troubleshooting

**NOTE:** If you encounter a problem you cannot solve, contact an authorized service center for assistance.

### Power Problems

Power does not turn on when using battery power

- The remaining battery power may be too low to run your device. Charge the battery.

### Screen Problems

Screen responds slowly

- Make sure that your device is not running out of battery power. If the problem still exists, reset your system.

Screen freezes

- Reset your system.

Screen is hard to read

- Make sure that the backlight of the display is on.
- Move to a location with more light.

Inaccurate response to taps

- Recalibrate the touch screen.

## Connection Problems

### Cable Connection Problems

- Make sure that your device and your computer are both turned on before trying to establish a connection.
- Make sure that the cable is securely plugged into the USB port on your computer and on the device. Connect the USB cable directly to your computer—do not run the cable through a USB hub.
- Reset your device before connecting the cable. Always disconnect your device before you restart your computer.

## GPS Problems

When there are no valid signals available, consider the following:

- Make sure that the device is facing a clear view of the sky.
- Note that the GPS reception can be affected by:
  - ✓ Bad weather
  - ✓ Dense overhead obstacles (e.g. trees and tall buildings)
  - ✓ Other wireless device in the car
  - ✓ Reflective car window tint and heated screens.

## 13.3 Maintaining Your Device

Taking good care of your device will ensure trouble-free operation and reduce the risk of damage to your device.

 
- Keep your device away from excessive moisture and extreme temperatures.
- Avoid exposing your device to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of your device or drop objects on your device.
- Do not drop your device or subject it to severe shock.
- Do not subject your device to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage your device. In the event of moisture condensation, allow the device to dry out completely before use.
- Take care not to sit on the device. We advise not to carry the device in one's back pocket for that reason.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean your device with it powered on. Use a soft, lint-free cloth moistened with water to wipe the screen and the exterior of your device.
- Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to your device. Disassembly, modification or any attempt at repair could cause damage to your device and even bodily injury or property damage and will void any warranty.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your device, its parts or accessories.

# 14 Regulatory Information

**NOTE:** Marking labels located on the exterior of your device indicate the regulations that your model complies with. Please check the marking labels on your device and refer to the corresponding statements in this chapter. Some notices apply to specific models only.

## 14.1 Regulations Statements

### Class B Regulations

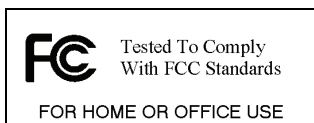

#### USA

#### Federal Communications Commission Radio Frequency Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

#### **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Please note:**

The use of a non-shielded interface cable with this equipment is prohibited.

**FCC RF Radiation Exposure Statement**

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with FCC RF exposure compliance requirements, avoid direct contact to the transmitting antenna during transmitting.
3. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Canada

Canadian Department of Communications

Radio Interference Regulations Class B Compliance Notice

This Class B digital apparatus meets all requirements of the Canada Interference-Causing equipment regulations.

Cet appareil numérique de Classe B respecte toutes les exigences du Règlement Canadien sur le matériel brouilleur.



## Bluetooth

**Bluetooth QD ID B012565**

## 14.2 Safety Precautions

- Prolonged listening of music in maximum volume can damage the ears.
- The use of headphones other than those recommended/supplied can cause hearing impairment due to excessive sound pressure.

### About Charging

- Use only the charger supplied with your device. Use of another type will result in malfunction and/or danger.
- This product is intended to be supplied by a LISTED Power Unit marked with “LPS”, “Limited Power Source” and output rated + 5 V dc / 1.0 A”.
- Use a specified charger approved by the manufacturer.

### About the AC Adapter

- Do not use the adapter in a high moisture environment. Never touch the adapter when your hands or feet are wet.
- Allow adequate ventilation around the adapter when using it to operate the device or charge the battery. Do not cover the AC adapter with paper or other objects that will reduce cooling. Do not use the AC adapter while it is inside a carrying case.
- Connect the adapter to a proper power source. The voltage requirements are found on the product case and/or packaging.
- Do not use the adapter if the cord becomes damaged.
- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

## About the Battery

- Use a specified battery in the equipment.

**CAUTION:** This unit contains a non-replaceable internal Lithium Ion battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush, puncture, or dispose of in fire or water.

- Important instructions (for service personnel only)
  - ✓ **Caution:** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
  - ✓ Replace only with the same or equivalent type recommended by the manufacturer.
  - ✓ The battery must be recycled or disposed of properly.
  - ✓ Use the battery only in the specified equipment.